




INSTALLATION INSTRUCTIONS ACCEL HIGH-FLOW FUEL VALVE #5105 / #5106

Drain fuel tank(s). Remove old valve. The ACCEL valve is installed on the fuel tank in the same manner as the OEM valve. Thread nut to lowest position on valve (LH thread). Be sure the non-stick washer is in the inside of the nut resting on top of the valve. Place the valve on the fuel tank bung (RH thread), and thread the fuel tank nut onto the tank bung until tight.

For 5106 only:

To prevent damage to O-rings, and possible leakage, **DO NOT REMOVE** hose barb from stem. Determine the best position for the hose barb, then tighten Nyloc nut on the bottom of the valve. Proceed to connect the fuel hose.

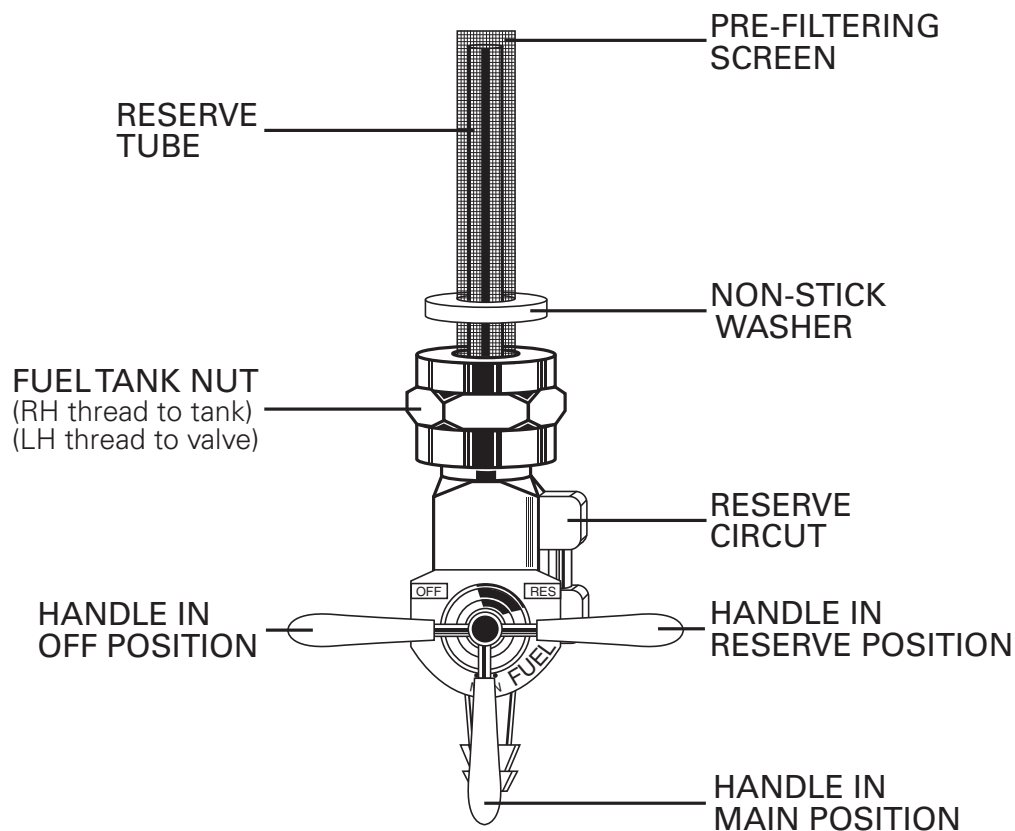

ACCEL is a trademark of Prestolite Performance
10601 Memphis Ave., #12
Cleveland, Ohio 44144
www.accel-motorcycle.com

Form 3-746-00 01/12