

# INSTRUCTION SHEET

## FOR UNIVERSAL SOLENOID APPLICATIONS

● NECESSARY PARTS IN PACKAGE

● OBSERVE TYPE OF INSTALLATION

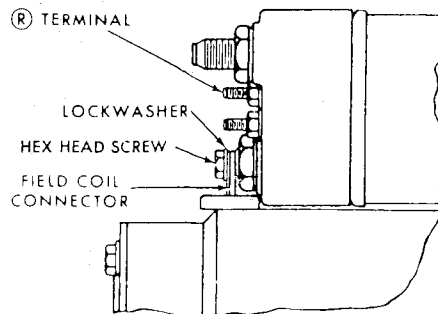


Figure 1

Field coil connection: Use short hex head screw and lock washer. If old unit did not have (R) terminal, disregard.

Figure 1

**NEVER REMOVE CAP OF SOLENOID OR LOOSEN TERMINAL MOUNTING NUTS  
MAKE CERTAIN TO INSTALL RETURN SPRING**

**\*\*The larger terminal connects to the battery\*\***

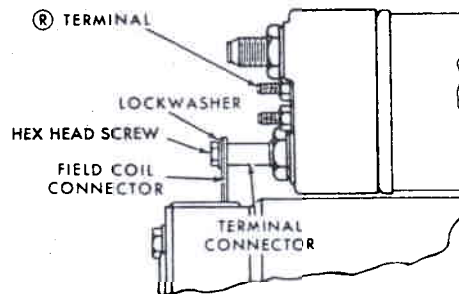


Figure 2

Field coil connection: Use long hex head screw, lock washer and copper tube as per illustration. If old unit did not have (R) terminal, disregard.

Figure 2

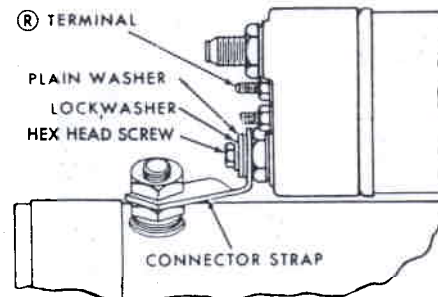


Figure 3

Field coil connection: Use short hex head screw, lock washer and plain washer. If old unit did not have (R) terminal, disregard.

Figure 3