



**UNIVERSAL HANGER KIT  
12-160**

**12-160 Universal hanger - Regulator removal & replacement**

1. Remove the plastic retaining cap & regulator assembly and discard
2. Install the regulator into the new plastic retaining cap.
3. Lubricate the O-ring. Install the regulator & cap assembly into the bore.

**199R11290  
Date: 3-6-17**



**UNIVERSAL HANGER KIT  
12-160**

**12-160 Universal hanger - Regulator removal & replacement**

1. Remove the plastic retaining cap & regulator assembly and discard
2. Install the regulator into the new plastic retaining cap.
3. Lubricate the O-ring. Install the regulator & cap assembly into the bore.

**199R11290  
Date: 3-6-17**



**UNIVERSAL HANGER KIT  
12-160**

**12-160 Universal hanger - Regulator removal & replacement**

1. Remove the plastic retaining cap & regulator assembly and discard
2. Install the regulator into the new plastic retaining cap.
3. Lubricate the O-ring. Install the regulator & cap assembly into the bore.

**199R11290  
Date: 3-6-17**