



Starter Motor Heat Shield #3678 Installation Instructions

Heat Shield installation may be completed without removing the starter from vehicle if there is adequate clearance inside engine compartment.

1. Disconnect "Negative" battery cable before beginning installation.
2. Loosen both outside/inside solenoid bolt (do not remove).
3. Loosen upper front starter cover bolt and install heat shield.
4. Remove inside and outside solenoid bolts. Rotate heat shield into position and re-install bolts.
5. Tighten all bolts mounting securely.
6. Reconnect "Negative" battery cable.

CAUTION: Be sure starter wires do not rub against Heat Shield Engine Block or Cylinder Head.

199R11354

Date: 8-8-17



Starter Motor Heat Shield #3678 Installation Instructions

Heat Shield installation may be completed without removing the starter from vehicle if there is adequate clearance inside engine compartment.

1. Disconnect "Negative" battery cable before beginning installation.
2. Loosen both outside/inside solenoid bolt (do not remove).
3. Loosen upper front starter cover bolt and install heat shield.
4. Remove inside and outside solenoid bolts. Rotate heat shield into position and re-install bolts.
5. Tighten all bolts mounting securely.
6. Reconnect "Negative" battery cable.

CAUTION: Be sure starter wires do not rub against Heat Shield Engine Block or Cylinder Head.

199R11354

Date: 8-8-17