



Replacement Hook (w/ Clasp)
1062AOR (Black) & 1063AOR (Red)



1. Drive the pin out of the hook using a hammer and a punch.
2. Install the winch cable or rope on the loop of the hook.
3. Reinstall the pin with the spacer in the middle – similar to what is shown in the photo.



199R11807



Replacement Hook (w/ Clasp)
1062AOR (Black) & 1063AOR (Red)



1. Drive the pin out of the hook using a hammer and a punch.
2. Install the winch cable or rope on the loop of the hook.
3. Reinstall the pin with the spacer in the middle – similar to what is shown in the photo.



199R11807



Replacement Hook (w/ Clasp)
1062AOR (Black) & 1063AOR (Red)



1. Drive the pin out of the hook using a hammer and a punch.
2. Install the winch cable or rope on the loop of the hook.
3. Reinstall the pin with the spacer in the middle – similar to what is shown in the photo.



199R11807



Replacement Hook (w/ Clasp)
1062AOR (Black) & 1063AOR (Red)



1. Drive the pin out of the hook using a hammer and a punch.
2. Install the winch cable or rope on the loop of the hook.
3. Reinstall the pin with the spacer in the middle – similar to what is shown in the photo.



199R11807



Replacement Hook (w/ Clasp)
1062AOR (Black) & 1063AOR (Red)



1. Drive the pin out of the hook using a hammer and a punch.
2. Install the winch cable or rope on the loop of the hook.
3. Reinstall the pin with the spacer in the middle – similar to what is shown in the photo.



199R11807



Replacement Hook (w/ Clasp)
1062AOR (Black) & 1063AOR (Red)



1. Drive the pin out of the hook using a hammer and a punch.
2. Install the winch cable or rope on the loop of the hook.
3. Reinstall the pin with the spacer in the middle – similar to what is shown in the photo.



199R11807