

MSD INSTALLATION INSTRUCTIONS

Cap-A-Dapt for MSD Small Diameter Distributors PN 8441

ONLINE PRODUCT REGISTRATION: Register your MSD product online. Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to www.msperformance.com/registration.

Parts Included:

1 - Adapter Spacer	1 - Wire Retainer
1 - Cap, PN 8408	1 - Rotor, PN 8423
2 - Socket Head Cap Screws	2 - Rotor Screws and Belleville Washers
	2 - 1.5" Self Tapping Screws

This Cap-A-Dapt will fit MSD Small Diameter Pro-Billet Distributors.

1. Remove the existing distributor cap and rotor. Note which spark plug wire connects to which terminal to ensure correct routing when reassembling.
2. Fit the Adapter to the distributor base (Figure 1). Use the supplied Socket Head Cap screws to hold the retainer.
3. Install the new rotor. Position the belleville washers with the dome facing up.
4. Install the new distributor cap followed by the spark plug wires. A wire retainer is supplied to secure the wires. Align the mounting bosses and use the supplied 1.5" self tapping Phillips screws to hold the retainer in place.

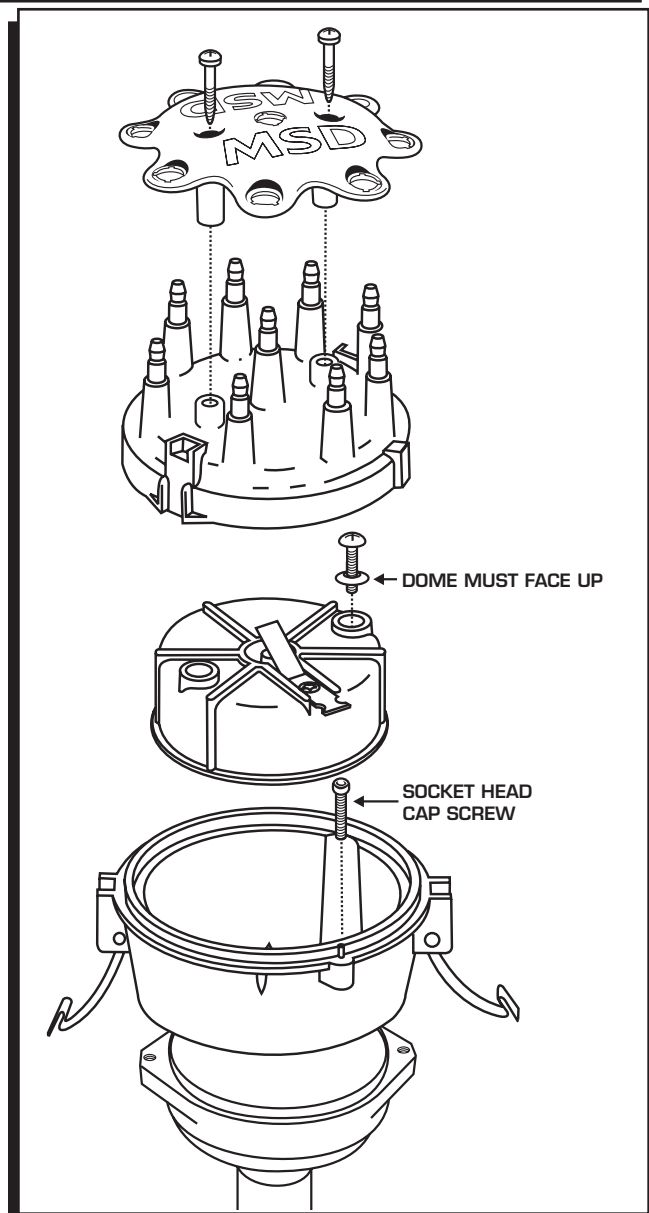


Figure 1 Installing the Cap-A-Dapt.