



Driven Beyond Perfection

Wireless Remote Trunk Release

INSTALLATION INSTRUCTIONS

C5ZZ-6243200-WR

APPLICATION: 65-70 Mustang

Thank you for purchasing our wireless remote release. Note: This product is designed to be used with our electric trunk release units C5AZ-6243200-EL or C7AZ-6243200-EL. Use of this product with any other product will void any warranties.

TOOLS REQUIRED:

- Phillips head screwdriver
- Wire stripper-cutter-crimper

PREPARATION:

Our wireless remote release is supplied with 2 release buttons with key rings. These buttons are set to a specific frequency. Note the numbers listed on the backs of all three main components.

The wireless switch has a wire harness with black, yellow and red wires. There is also a thin red antenna wire attached to this box. **DO NOT cut or alter this antenna wire. It should be unwrapped and allowed to hang out of the way.**

INSTALLATION INSTRUCTIONS:

Step 1:

Attach the dark blue ring terminal connector to the black wire. Attach the light blue female bullet connector to the yellow wire. Attach the aqua female spade connector to the red wire, then insert the fuse tap. (See figure 1)

Step 2:

The wireless switch should be located near the fuse box, under the dash. Choose a location that will be out of sight. You can also locate the switch box anywhere there is a 7 to 10 amp power source.

Many 1967-70 Mustangs have an electrical harness in the wheel well area that is "hot" when the ignition is off. If using this option, do not attach the female spade and fuse tap on the red wire. You will have to choose your own connectors.

Step 3:

Attach the black wire with the ring terminal to a ground point. Typically any body metal under the dash will serve as a ground point.

The yellow wire with the female bullet will be connected to the long white wire supplied. Attach the light blue male bullet connector to one end of the white wire and plug into the yellow wire.

Step 4:

Route the white wire back along the driver's side of the interior towards the chrome trunk release lever.

The white wire will be attached to the trunk release lever wire that goes to the trunk latch. This can be done anywhere after the chrome trunk release.

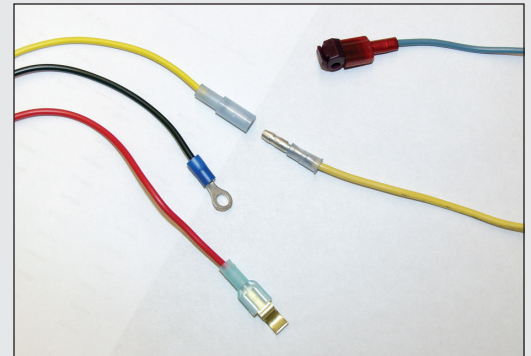
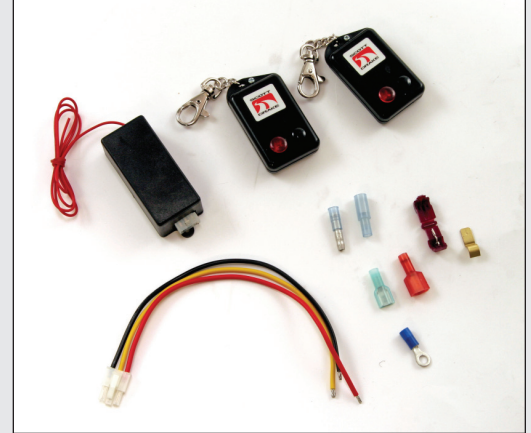


Figure 1

IS.43200-WR

Step 5:

Cut the white wire to length and attach the red insulated male quick connector. Crimp the quick splice connector to the trunk release wire and connect the male quick connector.

You may wish to remove the driver's side sill plate at this time to hide the wires and connectors. When tucking any wires under the sill plate, be careful of sharp edges or screws that may damage the wires. Do not pinch the wires between metal parts.

Step 6:

The red power wire on the switch box harness can now be plugged into the fuse panel. Consider the options of how and when you will want the wireless remote to function. In most situations, the car's ignition will be off. You will want to "pop" the trunk lid while approaching the car in a parking lot.

The switch box red wire must be connected to constant power source. Check this by touching an automotive circuit tester to a fuse in the fuse box with the ignition off. You will need to check both ends of the fuse. If the test light comes on when the tester is touched to either side, the circuit is considered "hot" with the ignition off.

Hint: The best way to insert the fuse tap to a glass tube fuse is to pull one end of the tube fuse out of the panel, slide the fuse tap over the end and push both back in at the same time.

Step 7:

The installation is complete. Check the trunk release by pushing the red button on the wireless release. The truck latch should release and the trunk lid pop up.

If the trunk latch fails to pop, check all connections. Also check the fuse to make sure it is good. If the fuse has blown, you have a short somewhere in the connections. Check the white wire to make sure it was not crimped or cut during reinstalling the sill plate.

Note that the wireless release will operate from a long distance depending on obstructions and radio interference. Be aware that unintentional release of the trunk latch may occur if the release button is pushed while in a pocket or purse.

To place an order, or for current pricing, call your authorized Scott Drake dealer.

For a list of dealers in your area, or for any other questions about Scott Drake products, visit www.scottdrake.com or call our customer service department toll free:

1.800.999.0289

Mon - Thurs 7:00 a.m. to 5:00 p.m.
Friday 7:00 a.m. to 4:30 p.m. - PST



130 Cassia Way
Henderson, NV 89014

t: 702.853.2060
f: 702.853.2062

SATISFACTION GUARANTEE:

If you are not happy with this product for any reason or found product to be defective in manufacturing, simply return it to Scott Drake Enterprises, Inc. within 30 days of purchase and we will replace it - no questions asked. We stand behind our products one hundred percent, so you can sit behind the wheel with pride.

** Please call Scott Drake Customer Service for a Return Authorization (RA) before returning any product. Proof of purchase and dated receipt must be present with any return. All returned products are tested and if found to be damaged by the installer, no replacement will be issued. You pay the cost to ship to us, we pay for the return shipping. Guarantee does not include any labor and/or tax charges incurred.*