



MODEL 1908 — LIST NUMBER
STAMPED ON FUEL INLET BOSS

See Service Parts List for items not illustrated here.

Parts having ♦ designation are not available for service.

Refer to Numerical Listing Section for Variable Parts

Index Number	Letter	Part Name	Part Number or Reference Section	Index Number	Letter	Part Name	Part Number or Reference Section
1	L	Choke Plate Assy.	2R-324A	51	L-M	Pump Inlet Ball	28R-6
2	L	Choke Shaft or Choke Shaft & Lev. Assy.	3R-353	52	L	Throt. Lev. Ball	28R-58
3	L	Choke Shaft Link & Lev. Assy.	X	54	L-M	Pump Disch. & Push Rod Sleeve Ball	28R-94
4	L	Choke Pick Up Lev.	X	56	M	Pump Oper. Link	X
5	L	Choke Therm. Lev. Link & Piston Assy.	X	57	L	Choke Hsg. Plate	34R-2757
6	L	Choke Lev. Assy.	X	58	L	Float Bowl	34R-3382
7	L-M	Throt. Plate Scr. & L. W.	X	59	L	Main Well & Econ. Body & Plugs Assy.	X
8	L	Choke Lev. Swivel Scr.	5R-167	60	L	Choke Hsg. & Plugs Assy.	X
9	L	Choke Brkt. Clamp Scr.	5R-641	61	L-M-P	Pump Diaph. & Rod Assy.	8-154
10	L	Throt. Stop Scr.	5R-358	64	L-M	Float Ret.	36R-169
11	L	Main Well & Econ. Body Scr. & L. W. (Short)	5R-420	65	L-M	Choke Plate Link Ret.	36R-225
12	L	Main Well & Econ. Body Scr. & L. W. (Long)	5R-421	66	L	Choke Shaft Ret.	36R-276
13	L	Float Bowl Clamp Scr. & L. W.	5R-425	68	L	Idle Adj. Needle Sprg.	38R-108
14	L	Dashpot Lev. Scr.	5R-441	69	L	Throt. Stop Scr. Sprg.	38R-110
15	L	Dashpot Lev. Adj. Scr.	5R-447	70	L	Pump Return Sprg.	38R-395
16	L	Choke Pick Up Lev. Scr. & L. W.	5R-476	71	L	Pump Oper. Sprg.	38R-452
19	L	Choke Brkt. Scr. & L. W.	5R-523	74	L	Choke Lev. Sprg.	X
20	L	Throt. Stop Scr.	X	75	L	Choke Lev. Sprg.	38R-924
21	L	Throt. Body Scr. & L. W.	5R-571	76	L	Choke Brkt. Clamp Nut	39R-1
22	L	Econ. Body Scr. & L. W.	5R-641	77	L	Choke Shaft Nut	39R-11
23	L	Therm. Hsg. Scr.	5R-641	78	L	Throt. Lev. Ball Nut	39R-11
24	L	Choke Hsg. Scr. & L. W.	5R-806	79	L	Choke Pick Up Lev. Nut	39R-166
25	L-M	Choke Plate Scr. & L. W.	X	80	L	Pump Disch. Valve Weight	X
26	L	Pump Inlet Ball Ret.	7R-274	83	L	Fast Idle Cam Assy.	X
27	L	Pump Discharge Ball Ret.	7R-48-3	84	L	Pump Push Rod Sleeve	X
28	G-L-M-P	Flange Gskt.	X	86	L	Throt. Lev. Ball L. W.	46R-2
29	G-M-P	Econ. Body Gskt.	X	87	L	Dashpot L. W.	46R-10
31	G-M-P	Fuel Inlet Fitting Gskt.	X	88	L	Choke Shaft Nut L. W.	46R-252
32	G-M-P	Choke Hsg. Gskt.	X	90	L	Choke Shaft Seal Washer	46R-529
33	G-M-P	Float Bowl Gskt.	X	91	L	Choke Therm. Hsg. Assy.	X
34	G-M-P	Choke Therm. Hsg. Gskt.	X	92	L	Choke Brkt. Clamp	49R-149
35	G-M-P	Throt. Body Gskt.	X	93	L-M	Pump Oper. Link Cotter Pin	48R-183
36	G-M-P	Spark Valve Gskt.	X	94	L	Choke Brkt.	X
37	L	Throt. Plate	9R-70	95	L	Choke Therm. Hsg. Clamp	49R-128
38	L	Throt. Body, Shaft & Lev. Assy.	X	98	L	Dashpot Assy.	11-3
39	L	Dashpot Lev. Assy.	11R-612A	99	L	Fuel Inlet Baffle	X
40	L-M	Idle Adj. Needle	15R-36	100	L	Pump Oper. Lev.	X
41	L	Float & Lev. Assy.	X	103	L	Pump Oper. Lev. Ret.	75R-37
42	L-M-P	Fuel Inlet Valve & Seat Assy.	X	104	L	Fuel Inlet Baffle Washer	46R-418
44	L	Main Metering Jet	X	105	L	Fuel Inlet Seat Scr.	5R-423
46	L-M-P	Econ. Stem Assy.	25R-166A	*	L	Fuel Line Adapter	52R-90A
47	L-M	Spark Valve Assy.	X	*	L	Air Cleaner Adapter Assy.	61R-297A
48	L	Econ. Body Cover Assy.	25R-167A	*	L	Fuel Tube Hose	52R-75-5
49	G-L-P	Choke Shaft Seal	27R-204	*	L	Hose Clamp	36R-335
50	L-M-G	Fuel Inlet Seat Seal	27R-229	*	L	Air Cleaner Adapter Gskt.	8R-1090
						Fuel Line Fitting Elbow	19R-299

NOTE: "X" Symbol Indicates "Refer to Numerical Listing Section for Specific Part Required"

G = Gasket Kit; L = Loose Parts; M = Master Kit; P = Pep Kit

*These items are not shown on the typical view. They are packaged with some service units to provide a more universal coverage.