

INSTALL GUIDE

2011-2014 Ford F-150 5.0L

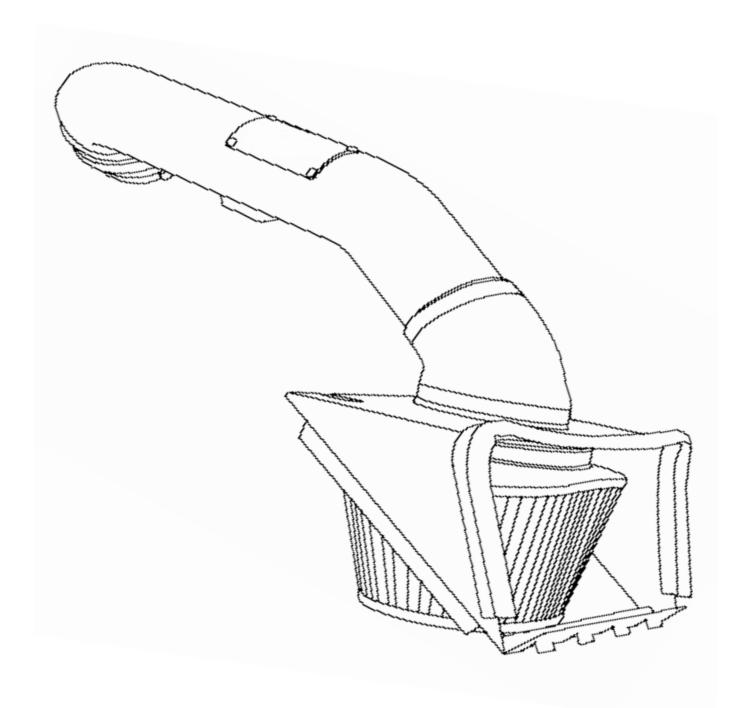


TABLE OF CONTENTS

3	GETTING STARTED
_	

3 PARTS LIST

4 INSTALLATION INSTRUCTIONS

- 4 REMOVING THE STOCK INTAKE ASSEMBLY
- 5 INSTALLING THE AIR FILTER
- 6 INSTALLING THE HOUSING
- 7 INSTALLING THE INTAKE TUBE

10 WARRANTY

GETTING STARTED

PARTS LIST




INSTALLATION INSTRUCTIONS

REMOVING THE STOCK INTAKE ASSEMBLY

CAUTION: Disconnect the ground cable from the battery before installation.

STEP 1 - Disconnect the wiring harness from the Mass Air Flow (MAF) sensor.

STEP 2 - Loosen the clamp securing the intake tube to the throttle body.

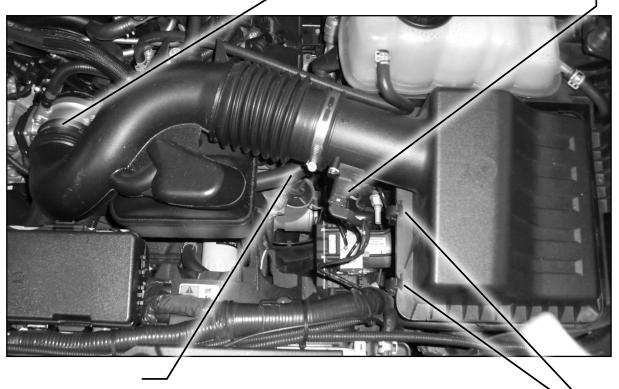

STEP 3 - Disconnect the crankcase vent tubes from the intake tube.

STEP 4 - Unclip the upper airbox from the lower airbox.

STEP 5 - Remove the intake tube, upper airbox and air filter. Also remove the middle clip from the stock air box as it will not be needed.

INSTALLING THE AIR FILTER

STEP 6 - Install the adaptor onto the Jammer housing using the five (5) button head screws provided with a 5/32 hex key.




STEP 7 - Install the elbow coupling onto the adaptor using provided clamps. (Do not tighten).

STEP 8 - Install the seal trim around the edges of the housing.


STEP 9 - Install the filter.

INSTALLING THE HOUSING

STEP 10 - Remove the MAF sensor from the stock intake tube and install on the Jammer intake tube using the supplied screws.

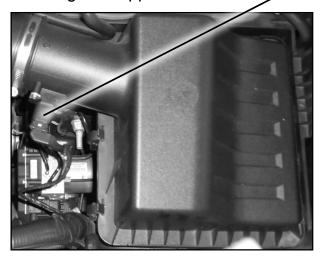

STEP 11 - Install the coupling hump and clamps on the throttle body.

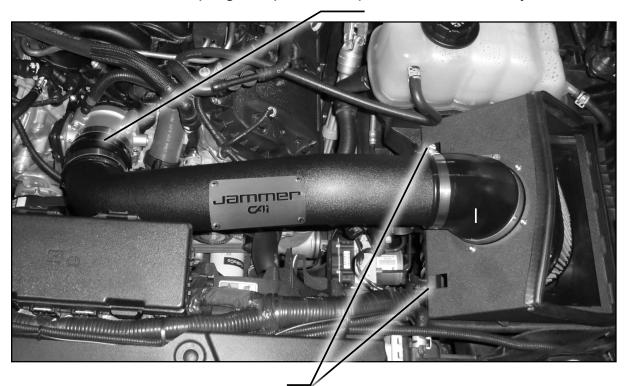


STEP 12 - Install the Jammer housing assembly in the lower airbox and secure using the stock front and rear clips only.

STEP 13 - Install the Jammer intake tube in the coupler elbow first followed by the throttle body coupler.

INSTALLING THE INTAKE TUBE

STEP 14 - Fine tune the alignment of the intake tube by rotating both the intake tube and elbow coupler and tighten the clamps.

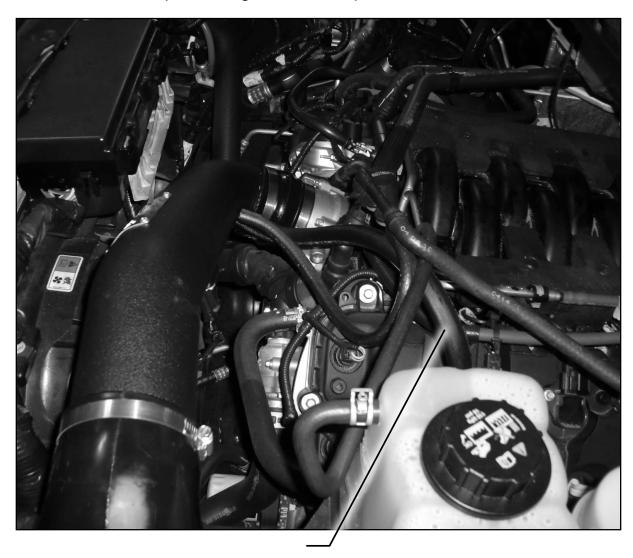

STEP 15 - Replace the stock crankcase vent tubes with the supplied hoses.

STEP 16 - Connect the wiring harness to the MAF sensor.



STEP 17 - Tighten the air filter clamp. Be sure not to over tighten or you can damage the filter base.



STEP 18 - The installation is now complete!

NOTE: Verify all connections are secure 100-200 miles after installation.

WARRANTY

Powerteq, LLC, (hereafter "SELLER"), subject to the conditions and limitations set forth herein, warrants to the original consumer purchaser only that each Jammer product sold by SELLER (the "Product") through an authorized dealer will be free from defects in material and workmanship under normal operating conditions for one (1) year after the date of purchase. SELLER will repair or replace, at SELLER's option, any Product that is found to be defective in material or workmanship under normal operating conditions during the one-year period after the date of purchase by the original consumer purchaser.

What Is Not Covered by This Warranty?

This warranty does not apply to any of the following:

- 1. Loss, damage, repairs, or maintenance required as a result of accident, abuse, negligence, or misuse.
- 2. Loss, damage, repairs, or maintenance required as a result of any third-party tuning software.
- 3. Loss, damage, repairs, or maintenance required as a result of fire, water, hail, theft, earthquake, wind, ice, lightening, acts of god, accident, animals, corrosive atmosphere, or other external causes beyond the control of SELLER.
- 4. Any special, indirect, incidental, consequential, or punitive damages, including property damage, arising out of or related to the use or loss of use of the Product under this Limited Warranty.
- 5. Any Products purchased through auction websites.

Limitation of Liability

The terms of this Limited Warranty constitute the entire agreement between the parties with respect to the Product. The original consumer purchaser's exclusive remedy shall be limited to the repair or replacement of the defective product. EXCLUDING THE LIMITED WARRANTY PROVIDED ABOVE, SELLER, TO THE MAXIMUM EXTENT PERMITTED BY LAW, MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, AND DISCLAIMS ALL WARRANTIES, DUEITES AND CONDITIONS, WHETHER EXPRESS, IMPLIED, OR STATUTORY, WITH RESPECT TO THE WORK, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY REMEDY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT.

How to Make a Warranty Claim

Contact Powerteq Customer Service. BUYER will be required to submit proof of purchase from an authorized dealer within 5 days of the warranty claim.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS. IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT, THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

COPYRIGHT© 2017 REV 00

For additional questions not found in the user guide call:

Powerteq Technical Support: (855) 292-2121 6:00 am - 5:00 pm MST

To expedite your support call, please have your Vehicle Information,

Part Number, and Serial Number ready prior to calling Technical Support.