

Holley 5.7" Touch Screen LCD Update

If you are using a Holley 5.7" Touch Screen LCD, and experience a battery drain over a period of 2-3 weeks, it is advised to install an update.

To install this update, perform the following:

- 1) Download the "ReloadPM Installer.zip". This file can be found at Holley.com under "Technical" and "Resource Documents and Downloads".
- 2) Unzip this file and copy to the Touch Screen SD memory card.
- 3) Insert the card into the Touch Screen and power it up.
- 4) Select "My Device" in the upper left hand corner of the screen.
- 5) Double-click on the "Storage Card"
- 6) Double-click on the "ReloadPM Installer" file.
- 7) Select "OK" on the popup window (note you do not need the keyboard for anything).
- 8) Installation is complete.