



7547-1
SMALL BLOCK CHEVROLET V8
X-CELeRator™

INTAKE MANIFOLD INSTALLATION INSTRUCTIONS

This instruction sheet is designed to cover a wide variety of vehicle applications. If your vehicle is not equipped with the items referred to in these instructions (EGR, transmission kick-down linkage, air conditioning, or power brakes), proceed to the next step.

Thank you for choosing WEIAND® for your manifold needs. It is our concern that you follow these instructions carefully, so that you can achieve the desired results. Slight errors in installation can make a big difference in performance, mileage, and emissions. Warranty is void if proper installation procedures are not followed. **PLEASE READ THE INSTRUCTIONS COMPLETELY BEFORE INSTALLING.**

IMPORTANT: Although all WEIAND® parts pass several inspections, it is imperative that the installer personally inspects the part before installation. Run a stiff wire through all passages while shining a bright light into it. Also, wash the part using a mild soap and water solution. Check the fit on all bolt holes for proper alignment and thread any fittings in first by hand. Failure to perform these simple checks could result in engine damage and may void your warranty.

APPLICATION: The WEIAND® 7547-1 X-CELeRator™ manifold was designed to be used on pre-1987 stock small block Chevrolet blocks/heads. This will work on 1987-92 blocks/heads with modifications to the 4 center mounting holes. Also, this manifold will work with any aftermarket cylinder heads, as long as they have stock ports/bolt locations. The effective RPM range of this manifold is 1500 through approximately 6500 RPM. The carburetor-mounting pad is designed to accept any square-bore aftermarket carburetor (spread-bore will NOT fit). This X-CELeRator™ manifold has been designed to accept most stock hardware, such as coolant and vacuum lines, coils, and brackets. Little alterations, if any, will be required.

NOTE: It may be necessary to purchase some of the parts listed below (or their equivalents) in order to properly complete the manifold installation. Determination of equivalency is the responsibility of the consumer. WEIAND® does not assume that responsibility.

PARTS REQUIRED:

- Intake manifold gasket set (Fel-Pro P/N 1256)
- Carburetor gasket, usually supplied with carburetor
- Spray gasket adhesive (Permatex spray-a-gasket)
- Carburetor-base gasket (usually supplied with carb)
- Oil-resistant, silicone-based sealant (Permatex silicone "form-gasket", Dow Corning Silastic, or equivalent)
- Aftermarket vacuum secondary or double pumper carburetor
- Transmission kick-down brkt (if converting 4bbl) GM P/N 3973000
- Pipe plugs, if needed
- PTFE tape

NOTE: Never install tapered (pipe) fittings in an aluminum manifold without PTFE tape or thread damage will occur.

TOOLS REQUIRED:

- Socket wrench set—3/8" drive ratchet and extensions
- Box end/flare wrenches (optional)
- Ignition wrench set
- Gasket scraper
- Drain bucket
- Torque wrench
- 3/8" x 16 NC tap (for cleaning bolt holes)
- Open end wrenches—3/8" to 1"
- 10" adjustable wrench (crescent)
- Screwdrivers—standard & Phillips, various lengths
- Needle nose pliers
- Timing Light
- File

MANIFOLD REMOVAL PROCEDURE:

1. Disconnect the ground cable from the battery.
2. Identify the vacuum and crankcase ventilation hoses (if any) leading to the air cleaner and note the routing and connection points. Remove the air cleaner.
3. Prior to removing any other vacuum lines, identify the routing of the lines. Mark and remove the vacuum lines from the carburetor and/or intake manifold.
4. Drain the radiator. It may be necessary to remove the bottom radiator hose, if there is no drain plug in the radiator.

WARNING: Hot water and steam may be present if the engine is still warm.

5. Disconnect the throttle linkage, transmission kick-down linkage (auto trans. only), and choke rod from the carburetor, (if applicable).
6. Loosen the gas cap to relieve pressure from the fuel system. Disconnect the fuel line at the carburetor using flare wrenches. Plug the end of the fuel line to prevent fuel leakage. Remove the carburetor.
7. Tag and disconnect the ignition coil and sensor wires. Remove the ignition coil bracket and the coil.
8. Remove the radiator hose, thermostat housing, and the thermostat.
9. Remove all water and vacuum fittings from the manifold.
10. Remove all remaining brackets (if any) from the manifold.
11. Loosen or remove valve covers (if required) to assist in the manifold removal.

IGNITION REMOVAL PROCEDURES:

NOTE: In some applications, removal of your distributor is not necessary. If so, move on to step 6 below.

CAUTION: FOLLOW THESE INSTRUCTIONS CAREFULLY, AS SERIOUS DAMAGE CAN OCCUR WHEN THE IGNITION IS NOT RE-INSTALLED CORRECTLY.

1. Remove the distributor cap.
2. Note the position of the rotor and make a mark on the distributor case in line with the rotor tip.
3. Note the position of the distributor vacuum canister and place some type of reference mark on a convenient surface.
4. Note the position of the points, if open, how much; if closed, note the distance from the point block to the cam lobe.
5. Remove the distributor. **DO NOT** rotate the engine after removing the distributor.
6. Remove the 12 intake manifold-to-cylinder head bolts.
7. Remove the intake manifold.

INSTALLING YOUR NEW WEIAND MANIFOLD:

1. To prevent gasket pieces from falling into ports and valleys when cleaning old gaskets from head surfaces, lay rags into all ports and valleys. When clean, remove the stuffing carefully. Make sure that all particles that fell on the rags are completely removed. Wipe surfaces with rags soaked in lacquer thinner or alcohol to remove any oils or grease. This is a must for proper manifold/gasket sealing.
2. Apply a thin coat of spray adhesive to the cylinder head side of the intake gasket surface. Lay the manifold gasket in place.
3. Apply a 1/4" wide bead of oil-resistant RTV-silicone sealant to the front and rear block-sealing surfaces, making sure to overlap the manifold gaskets at all four corners. Do not use cork or rubber seals.

NOTE: Thread sealant should be used on all bolt threads.

4. Carefully, lay your WEIAND® intake manifold in place. If the manifold must be moved, re-check the gaskets. Install the intake bolts initially torquing to 10 ft./lbs., then 15 ft./lbs., following the factory GM sequence, and finally torque to 25 ft./lbs.
5. Install the thermostat, gasket, and housing (using silicone sealant on both sides of the gasket). Be sure that the thermostat housing has been cleaned of any old gasket material.
6. Install the heater and radiator hoses.
7. If you had to remove your distributor, install it at this time. Make sure that your distributor engages the oil pump drive shaft.
8. Check the location of the rotor and distributor body, making sure your reference marks line up. Refer to ignition removal section (steps 2, 3, & 4). Tighten the distributor body just enough that it can still be rotated by hand.
9. Install all the water sensors and vacuum fittings into the manifold.

NOTE: Use PTFE tape or pipe dope on all pipe threads.

10. Plug all unused water and vacuum ports in the manifold.
11. Install your four carburetor studs in the manifold. Place the carburetor gasket on the clean carburetor pad. Do not use any type of sealant on the carburetor gasket.
12. Install the carburetor. Connect all linkage and throttle springs.
13. Connect all vacuum and fuel lines. Refer to your tags or drawings for correct placement.
14. Automatic transmissions only: Adjust kick-down or throttle pressure linkage for proper shift points. Check all linkages, making sure that there are no obstructions in function.
15. If required, reinstall valve covers and new gaskets.
16. Install the A/C and coil brackets, coil, wires, and all brackets that were removed from the manifold.
17. Close the drain and fill the radiator to the proper level with coolant.
18. Retighten the gas cap and connect the battery cable.
19. Hook up the timing light and start the engine. Set the timing to factory specs. Tighten the distributor.
20. Check for possible fuel, oil, or coolant leaks and for proper choke operation.
21. Install the air cleaner.

CAUTION: Check to be sure that there is adequate clearance for the throttle and choke linkages through their range of travel. Check for adequate hood clearance before closing the hood.

22. Operate the engine for 30 minutes. Allow the engine to cool and re-torque the manifold bolts following step 4 above.

YOUR MANIFOLD INSTALLATION IS COMPLETE! NOW IS A GOOD TIME TO CHANGE YOUR OIL AND FILTER.

Technical Service: 1-270-781-9741 • www.weiand.com

© 2003 Weiand® Air Systems. All rights reserved.

W504

Revision Date: 5-26-16