




BLOCK HUGGER HEADERS
Big Block Chevy
Small Block Chevy D-Port
LS-1

11701FLT, 11701-1FLT, 11701-2FLT, 11701-7FLT
11705FLT, 11705-1FLT, 11705-2FLT, 11705-7FLT
11706FLT, 11706-1FLT, 11706-2FLT, 11706-7FLT

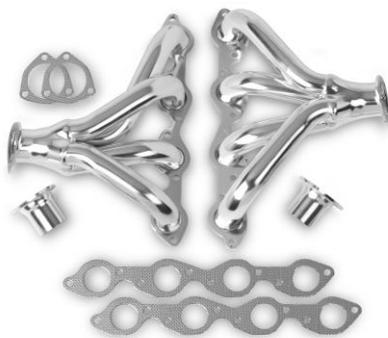

NOTE: Read all instructions carefully before attempting the installation.

Thank you for making FLOWTECH HEADERS your choice in a high-performance exhaust system. Extensive dyno/street/track testing has enabled FLOWTECH to offer the most advanced design in headers for your application. Proper installation and maintenance will ensure long life and maximum performance from your FLOWTECH exhaust system.

WARNING! Breaking in an engine with ceramic-coated headers WILL result in damage to the coating and will VOID all warranties. FLOWTECH® recommends using a cast iron exhaust manifold or old headers to break in new engines to avoid coating damage. Please call tech service at 1-270-781-9741 or 1-866-464-6553 for additional information regarding ceramic-coated exhaust products.

BEFORE STARTING:

1. Place the vehicle in an adequately lit location where the floor is solid and flat. DO NOT work on a hot engine. Heat causes metal to expand and makes the removal of fasteners more difficult. Disconnect the battery cables from the battery to prevent electrical damage. Raise the front end for access to the exhaust manifold flanges. DO NOT DEPEND ON A JACK! Use jack stands and block the tires to safely support the vehicle.
2. Spray WD-40® or equivalent on all accessible fasteners and fittings before removing them.
3. Remove the existing headers from both the driver's side and the passenger's side of the vehicle.
4. On the driver's side, using a gasket scraper, remove all carbon deposits and high spots from the head surface.
5. While holding the header in place, slide the supplied gasket between the motor and the header. Start the bolts (most restricted first) and washers on the center holes before pressing the header to the head. Tighten the nuts and bolts to the factory specifications.
6. On the passenger's side, using a gasket scraper, remove all carbon deposits and high spots from the head surface.
7. While holding the header in place, slide the supplied gasket between the motor and the header. Start the bolts (most restricted first) and washers on the center holes before pressing the header to the head. Tighten the nuts and bolts to the factory specifications.
8. Install spark plugs and wires.
9. Make sure there is adequate clearance on plug wires, battery cables, wire looms, brake lines, coolant lines, etc.

10. Reconnect the battery cables, rechecking everything in the process.
11. Start the engine and let it warm up. Check for leaks. Shut engine off and let it cool down. Check to make sure all connections are tight.
12. When finished with the installation, give your vehicle a test drive checking carefully for any new noises. After several days of driving, re-tighten all the bolts.

Any questions? Please contact Technical Service: 1-866-464-6553 or 1-270-781-9741. For online help, please go to www.holley.com.

LIMITATION OF LIABILITY – DISCLAIMER:

The regulation of emissions production, noise levels, and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns, and counties.

FLOWTECH makes no warranties of merchantability, of fitness for particular purpose, or that its products are approved for general use, or that its products are approved for general use, or that its products comply with laws, regulations, or ordinances in the state where they may be sold to the ultimate purchaser, the consumer.

Unless expressly stated to the contrary in the catalog, instruction sheet; or price list, the entire risk as to the conformity of any company product in any such state and as to repair should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer, of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, the retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, or repair.

THE FOREGOING STATEMENT LIMITS THE LIABILITY OF THE MANUFACTURER.

California vehicle code, sections 27156 and 38391, prohibits the advertising, offering for sale, or installation of any device, which modifies a vehicle's emission control system, unless exempted, unless otherwise noted. FLOWTECH™ Headers that have not received an Executive Order (E.O.) exemption from these code sections are not legal for sale or use in California on vehicles originally equipped with catalytic converters, except for racing vehicles, which may never be driven upon a highway. Check with your local authorities to determine if these headers are legal for use in your particular area.

**11701FLT, 11701-1FLT, 11701-2FLT, 11701-7FLT
11705FLT, 11705-1FLT, 11705-2FLT, 11705-7FLT
11706FLT, 11706-1FLT, 11706-2FLT, 11706-7FLT**

© 2014 Flowtech Exhaust. All rights reserved.

Date: 10-14-14