




**SHORTY SMOG HEADERS**  
**1991-99 Jeep Cherokee XJ 4WD**  
**1993-99 Jeep Grand Cherokee 2/4WD**  
**I6 - 4.0L**  
**P/N 92001FLT (Black Paint) & 92001-1FLT (Ceramic Coated)**

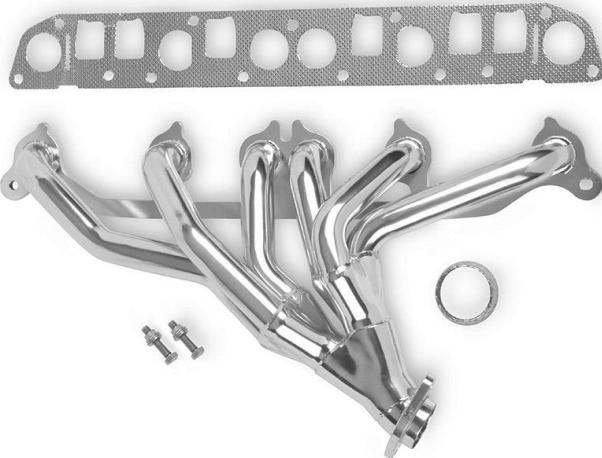

**NOTE: Read all instructions carefully before attempting the installation.**

Thank you for making FLOWTECH HEADERS your choice in a high-performance exhaust system. Extensive testing has enabled FLOWTECH to offer the most advanced design in headers for your application. Due to the restricted room available in the engine compartment, your headers may be close to some body and chassis components. This condition is normal. The installation will take approximately 1-2 hours and requires the motor to be lifted to install the headers. However, the additional horsepower and improved performance will more than justify your efforts. Proper installation and maintenance will ensure long life and maximum performance from your FLOWTECH exhaust system. This part is 49 state emissions legal.

**WARNING! Breaking in an engine with ceramic-coated headers WILL result in damage to the coating and will VOID all warranties.** FLOWTECH® recommends using a cast iron exhaust manifold or old headers to break in new engines to avoid coating damage. Please call tech service at 1-270-781-9741 or 1-866-464-6553 for additional information regarding ceramic-coated exhaust products.

**BEFORE STARTING:**

Your vehicle must be raised a minimum of 36 inches. A floor hoist is ideal. If no hoist is available, we strongly urge the use of axle stands as a safety measure. This installation has a high degree of difficulty. We recommend professional installation of these headers.

**CAUTION!** Your Jeep should not be supported on a bumper jack prior to installing headers, take the time to make a careful and complete header fitting into your vehicle properly.

1. Place the vehicle in an adequately lit location where the floor is solid and flat. DO NOT work on a hot engine. Heat causes metal to expand and makes the removal of fasteners more difficult. Disconnect the battery cables from the battery to prevent electrical damage. Raise the front end for access to the exhaust manifold flanges. DO NOT DEPEND ON A JACK! Use jack stands and block the tires to safely support the vehicle.
2. Spray WD-40® (or equivalent) on all accessible fasteners, exhaust hangers, and fittings before removing them.
3. Remove the factory air cleaner assembly and loosen the power steering belt tensioner. Remove the belt and unbolt the power steering bracket from the water pump.
4. Remove the exhaust manifold.

5. Using a gasket scraper, remove all carbon deposits and high spots from the head surface. Apply a high temperature sealer to the exhaust pipe flare, to avoid problems due to the lack of space later in the installation.
6. While holding the header in place, slide the supplied gasket between the motor and the header. Start the bolts (most restricted first) and washers on the center holes before pressing the header to the head. Tighten the nuts and bolts to the factory specifications in an alternating pattern.
7. Reconnect the exhaust system to the header using the hardware provided.
8. Reconnect the battery cables, rechecking everything in the process.
9. Start the engine and let it warm up. Check for leaks. Shut engine off and let it cool down. Check to make sure all connections are tight.
10. When finished with the installation, give your vehicle a test drive checking carefully for any new noises. After several days of driving, retighten all the bolts.

Any questions? Please contact Technical Service: 1-866-464-6553 or 1-270-781-9741. For online help, please go to [www.holley.com](http://www.holley.com).

**LIMITATION OF LIABILITY – DISCLAIMER:**

The regulation of emissions production, noise levels, and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns, and counties.

FLOWTECH makes no warranties of merchantability, of fitness for particular purpose, or that its products are approved for general use, or that its products are approved for general use, or that its products comply with laws, regulations, or ordinances in the state where they may be sold to the ultimate purchaser, the consumer.

Unless expressly stated to the contrary in the catalog, instruction sheet; or price list, the entire risk as to the conformity of any company product in any such state and as to repair should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer, of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, the retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, or repair.

**THE FOREGOING STATEMENT LIMITS THE LIABILITY OF THE MANUFACTURER.**

California vehicle code, sections 27156 and 38391, prohibits the advertising, offering for sale, or installation of any device, which modifies a vehicle's emission control system, unless exempted, unless otherwise noted. FLOWTECH™ Headers that have not received an Executive Order (E.O.) exemption from these code sections are not legal for sale or use in California on vehicles originally equipped with catalytic converters, except for racing vehicles, which may never be driven upon a highway. Check with your local authorities to determine if these headers are legal for use in your particular area.

**92001FLT**

**Revision Date: 10-27-14**