


17. Install the supplied 1/2" NPT fill plug on the B&M Cast Aluminum Cover and tighten.

18. Install and tighten any other parts (e.g., sway bar, panhard rod) if removed.

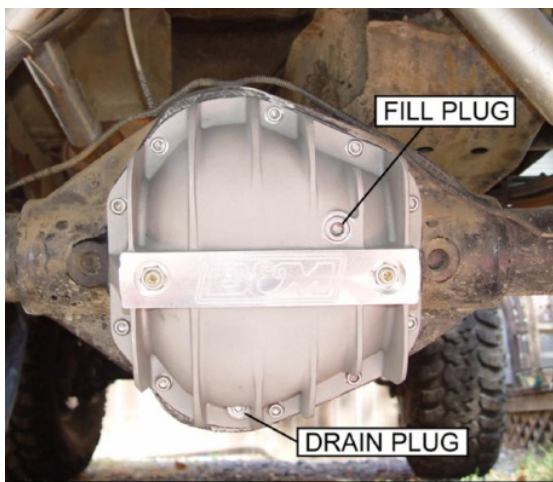

Tools List

Jack & Jack Stands
Drain Pan
Rags
RTV Silicone Gasket Maker
Gear Oil
Gear Oil Pump
Torque Wrench
3/8" Ratchet & 3" Extension
1/4" Allen
3/8" Allen
5/16" Allen
9/16" Socket
3/4" Socket
Flat Blade Screwdriver

Parts List

1 Cast Aluminum Cover
2 Load Bolts
2 Jam Nuts
1 1/4" NPTF Drain Plug
2 1/2" NPT Filler Plug
10 3/8"-16 Bolts
10 5/8" Washers

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

