

## P/N 20-91 Trans Kickdown Hardware kit w/ 2 Mounting Holes



This is the hardware kit needed when installing a Holley universal carburetor with two mounting holes to a Ford with Automatic Transmission.

1. Install the new throttle ball, lockwasher, and retaining nut to the carburetor throttle lever in the same position as the existing carburetor.
2. Insert the transmission kickdown screw with the retaining clip on the transmission kickdown lever (Figure 1).

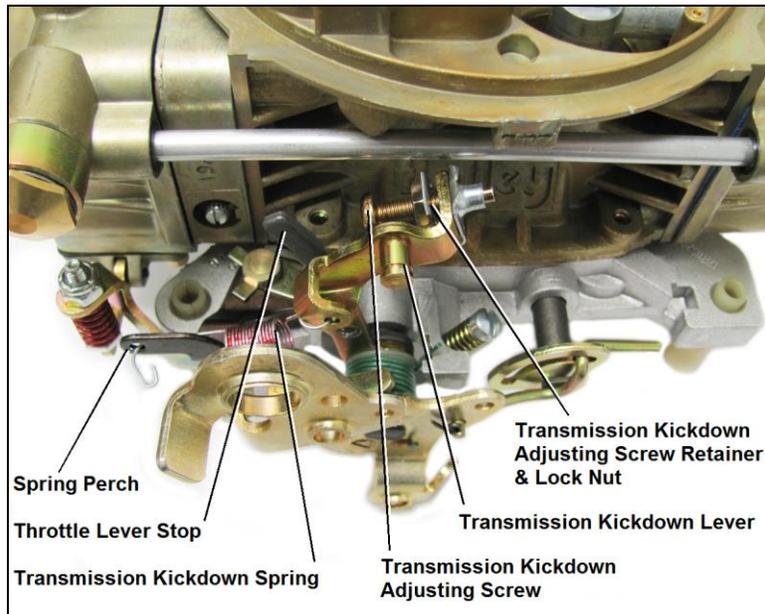


Figure 1

3. Remove the lock out screw from the kickdown lever (Figure 2).
4. Install the transmission kickdown spring between the transmission kickdown lever and spring perch on the bracket (Figure 1).

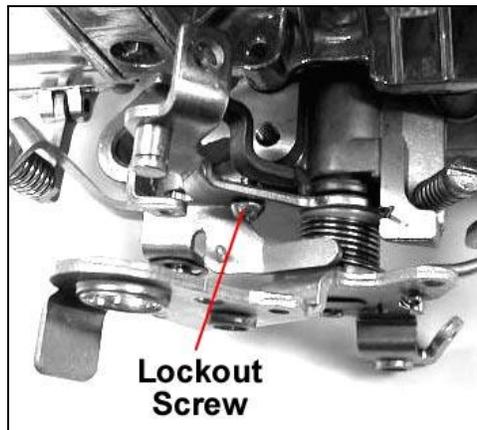


Figure 2