



**2015 Ford Mustang GT V8/5.0L, Blackheart Complete Exhaust System w/ Mufflers  
(For LT Headers)  
70503308-RHKR  
Installation Instructions**



Thank you for making HOOKER HEADERS your choice in a high-performance exhaust system. Extensive dyno/track testing has enabled HOOKER to offer the most advanced design in exhaust systems. The installation, while not complex, will take a certain amount of time. However, the additional horsepower and improved performance will more than justify your efforts. Proper installation and maintenance will ensure long life and maximum performance from your HOOKER HEADER exhaust system.

**BEFORE STARTING:**

Your vehicle must be raised a minimum of 36 inches. A floor hoist is ideal. If no hoist is available, we strongly urge the use of axle stands as a safety measure. Please read these instructions in their entirety before attempting installation.

**CAUTION! WORK ONLY ON A LEVEL SURFACE. USE JACKS /JACKSTANDS OF SUFFICIENT CAPACITY TO LIFT AND SUPPORT YOUR VEHICLE. NEVER WORK UNDER A VEHICLE SUPPORTED BY A FLOOR OR BUMPER JACK.**

**INCLUDED HARDWARE:**

P/N	Qty.	Description
556R23	6	Band Clamp, 3.0" x 1.25" Wide, SS Torca
41173HKR	1	3" SST Torca Coupler, 2 pack

Check the hardware package. If anything is missing, please contact Technical Service at 1-866-464-6553 or 270-781-9741.

**INSTALLATION:**

1. Disconnect the negative cable from the vehicle battery.
2. Lift the vehicle and secure on jack stands.
3. Loosen the (x2) band clamps securing the OE mid pipes to the front catalytic converter pipes.
4. Remove the (x2) 13mm head bolts securing the left and right side front OE muffler isolation mount brackets to the chassis. Set these parts aside, as they will be re-used.

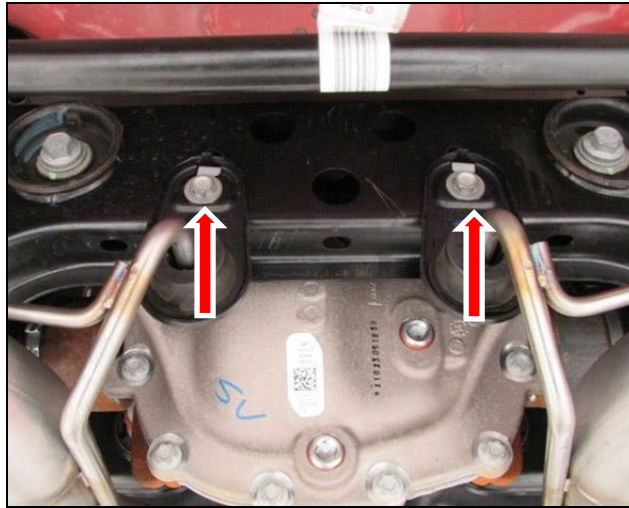


Figure 1

- Remove the (x4) 13mm head bolts securing the left and right side rear OE muffler isolation mount brackets to the chassis.

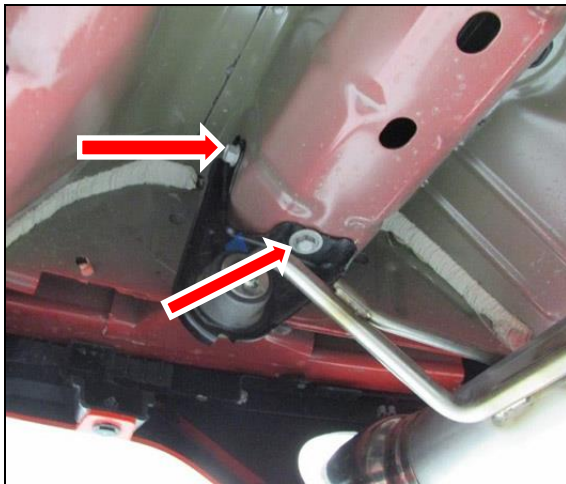


Figure 2

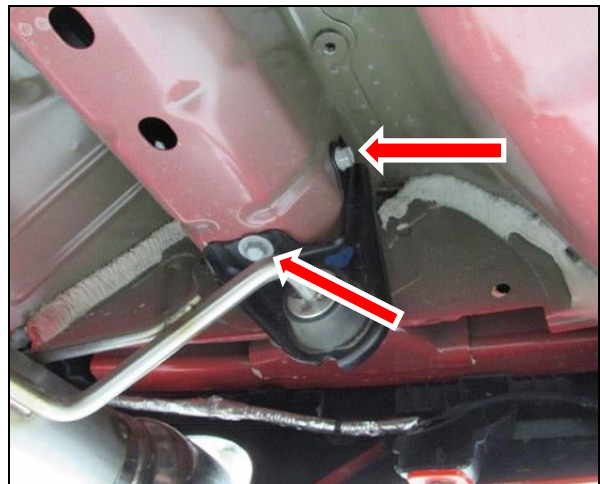


Figure 3

- Remove the OE mufflers and mid pipe.
  - On a workbench, remove the (x4) isolation mount brackets off the OE muffler sections and transfer onto the Blackheart Complete Exhaust System. The left and right side rear most isolation mounts need to slide onto the left and right side Blackheart hanger rods, until they touch the hanger rod stops. We recommend transferring the isolation mount brackets one at a time to ensure they go to the appropriate locations.
  - Install the long tube Blackheart headers. Refer to the Blackheart long tube header installation instruction sheet.
  - Using the (x2) supplied 3.0" Torca coupler clamps, install the Blackheart left and right side adapter pipes to the Blackheart long tube headers. Do not tighten the coupler clamps.
  - Using the (x2) supplied 3.0" band clamps, install the Blackheart X-Pipe onto the adapter pipes. Do not tighten the band clamps.
- NOTE:** The X-pipe needs to be installed with the shorter straight section of the outlet pipes on the passenger's side.
- Using the (x1) supplied 3.0" band clamp and (x1) original bolt removed from step 4, install the left side Blackheart mid pipe section and tighten the bolt. Do not tighten the band clamp.
  - Using the (x1) 3.0" supplied band clamp and (x1) original bolt removed from step 4, install the right side Blackheart mid pipe section and tighten the bolt. Do not tighten the band clamp.

13. Using the (x1) 3.0" supplied band clamp and (x2) original bolts removed from step 5, install the left side Blackheart muffler section and tighten the (x2) 13mm head bolts. Do not tighten the band clamp.
14. Using the (x1) 3.0" supplied band clamp and (x2) original bolts removed from step 5, install the right side Blackheart muffler section and tighten the (x2) 13mm head bolts. Do not tighten the band clamp
15. Align the Blackheart Exhaust System including the left and right side tips to your desired position and tighten the (x8) clamps from steps 9, 10, 11, 12, 13 and 14.
16. Connect the battery, start the engine, and check for leaks.
17. Re-check your work.
18. Remove the jack stands and lower the vehicle.
19. After 150 miles, re-check and tighten all bolts and clamps.

**NOTE: It is normal for the Blackheart Cat-Back Exhaust System to emit smoke for the first few minutes during break-in period.**

**LIMITATION OF LIABILITY – DISCLAIMER:**

The regulation of emissions production, noise levels, and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns, and counties.

HOOKER™ makes no warranties of merchantability, of fitness for particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations, or ordinances in the state where they may be sold to the ultimate purchaser, the consumer.

Unless expressly stated to the contrary in the catalog, instruction sheet; or price list, the entire risk as to the conformity of any company product in any such state and as to repair should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer, of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, the retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, or repair.

**THE FOREGOING STATEMENT LIMITS THE LIABILITY OF THE MANUFACTURER.**

California vehicle code, sections 27156 and 38391, prohibits the advertising, offering for sale, or installation of any device, which modifies a vehicle's emission control system, unless exempted, unless otherwise noted. HOOKER™ Headers that have not received an Executive Order (E.O.) exemption from these code sections are not legal for sale or use in California on vehicles originally equipped with catalytic converters, except for racing vehicles, which may never be driven upon a highway. Check with your local authorities to determine if these headers are legal for use in your particular area.

© 2014 Hooker Headers, Inc. All rights reserved.

**199R10805**

**Revision Date: 7-1-15**