




**2016-2018 Chevrolet Camaro SS V8, 6.2L
Blackheart Long Tube Headers
70101325-RHKR (1-7/8" x 3") & 70101326-RHKR (2" x 3")
Installation Instructions**

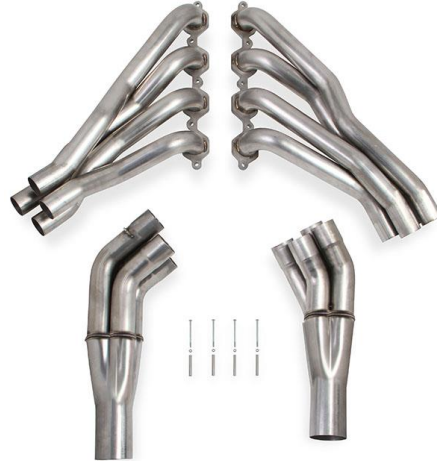

Thank you for making HOOKER HEADERS your choice in a high-performance exhaust system. Extensive dyno/track testing has enabled HOOKER to offer the most advanced design in exhaust systems. The installation, while not complex, will take a certain amount of time. However, the additional horsepower and improved performance will more than justify your efforts. Proper installation and maintenance will ensure long life and maximum performance from your HOOKER HEADER exhaust system.

BEFORE STARTING:

Your vehicle must be raised a minimum of 36 inches. A floor hoist is ideal. If no hoist is available, we strongly urge the use of axle stands as a safety measure. Please read these instructions in their entirety before attempting installation.

CAUTION! WORK ONLY ON A LEVEL SURFACE. USE JACKS /JACK STANDS OF SUFFICIENT CAPACITY TO LIFT AND SUPPORT YOUR VEHICLE. NEVER WORK UNDER A VEHICLE SUPPORTED BY A FLOOR OR BUMPER JACK.

NOTE: HOOKER BLACKHEART RECOMMENDS LONG TUBE HEADERS WITH THE USE OF 45 DEGREE SPARK PLUG WIRE SET P/N 561-100, 561-101, OR 561-102. PLUG WIRE SETS ARE NOT INCLUDED.

INCLUDED HARDWARE:

P/N	Qty.	Description
505R74	4	M6 x 1.0 x 90mm Bolt
539R28	4	M6 Nut Serrated – Flange Lock Nut
540R25	4	Spacer, Aluminum 3/8" O.D. x 2-3/4" Length
217R2	4	Cable Ties
599R94	2	Decal – Blackheart 4" x 2"

Check the hardware package. If anything is missing, please contact Technical Service at 1-866-464-6553 or 270-781-9741.

INSTALLATION:

1. Disconnect the negative cable from the vehicle battery.
2. Lift the vehicle and secure on jack stands.
3. From under the vehicle, remove (x5) 13mm head bolts securing the center cross brace to the chassis. Set these parts aside as they will be re-used.

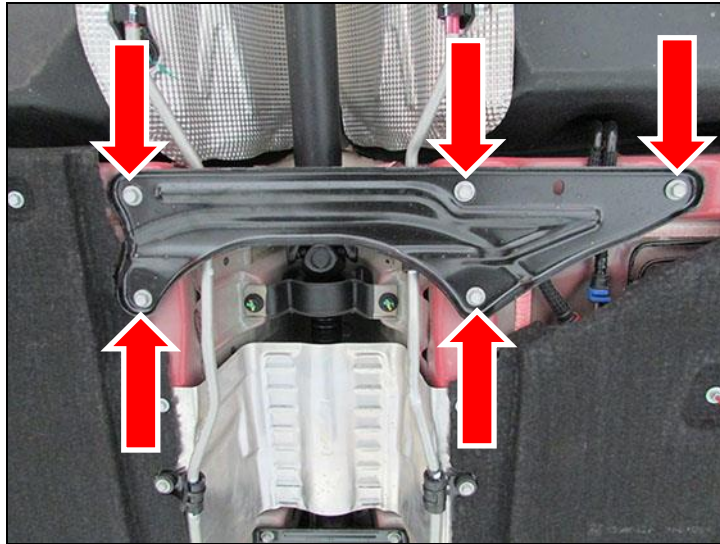


Figure 1

4. Disconnect the left and right side dual mode actuators off the wire harness.
5. Remove the (x4) O2 sensors off the catalytic converter/exhaust system.
6. Loosen the left side band clamp securing the OE mid pipe to the left side post catalytic converter.
7. Remove (x2) 15mm head nuts securing the OE mid pipe to the right side post catalytic converter.
8. Remove (x4) 15mm head nuts securing the left and right side rearmost aluminum hanger brackets off the vehicle.
9. Slide the (x4) rubber isolation mounts off the vehicle and then the (x2) aluminum hanger brackets. Remove the OE exhaust.
10. Remove (x4) 13mm head bolts/nuts securing the catalytic converter pipes to the transmission and remove the cross brace. These parts will not be re-used.

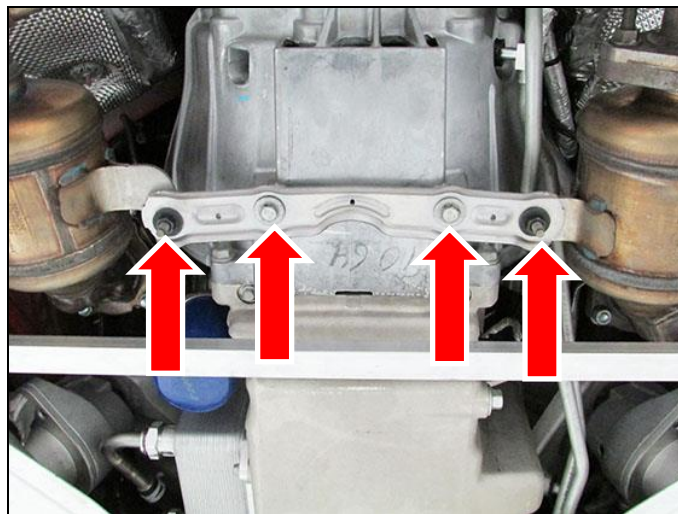


Figure 2

11. Remove (x8) 15mm head nuts securing the left and right side catalytic converter pipes off the OE exhaust manifolds. Remove the catalytic converter pipes.
12. Remove the (x4) left and right side plastic engine covers by lifting straight up (left and right side main engine cover) and remove (x4) T-30 Torx bolts securing the left and right side plastic valve covers to the main valve covers. You will have to unplug the breather line to get the left side plastic valve cover off.

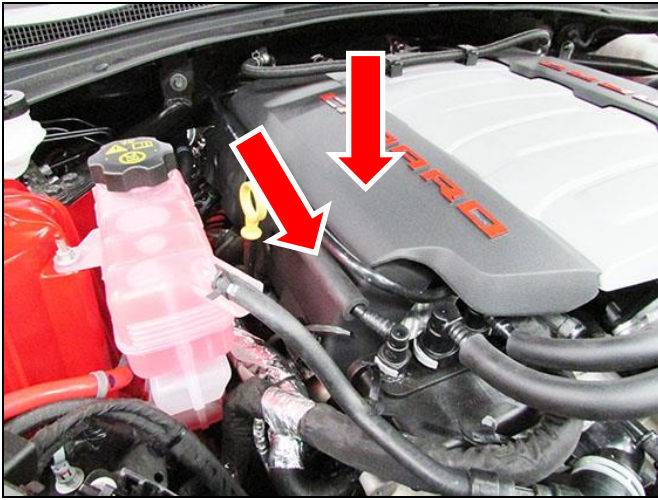


Figure 3

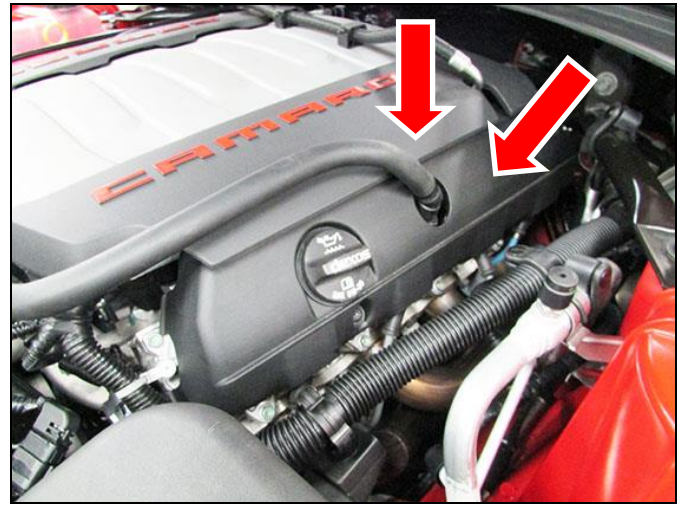


Figure 4

13. Remove the radiator surge tank by removing (x2) lines connected to the tank (pinch off the lines so you do not have to drain the coolant) and (x1) 10mm head nut securing the tank to the engine bay. Un-clip the positive battery cable off the radiator surge tank and then remove tank.

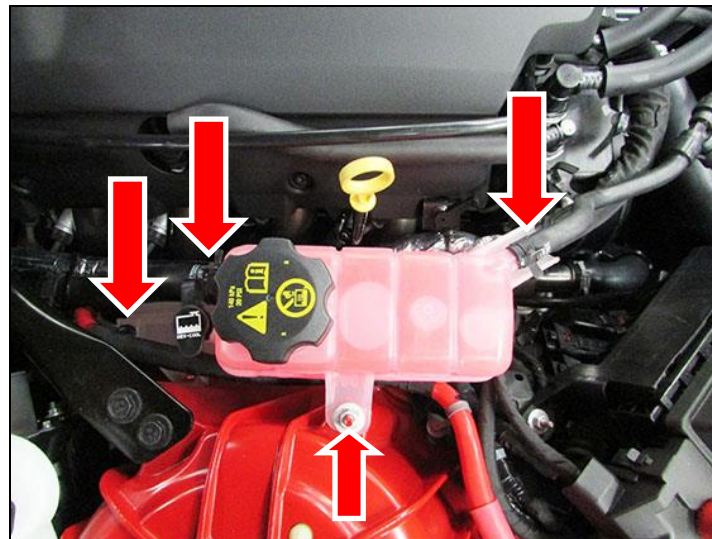


Figure 5

14. Remove the factory intake air box by loosening the hose clamp, un-clipping the wire harness, and un-plugging the mass air flow sensor. The air box can be removed by pulling straight up.

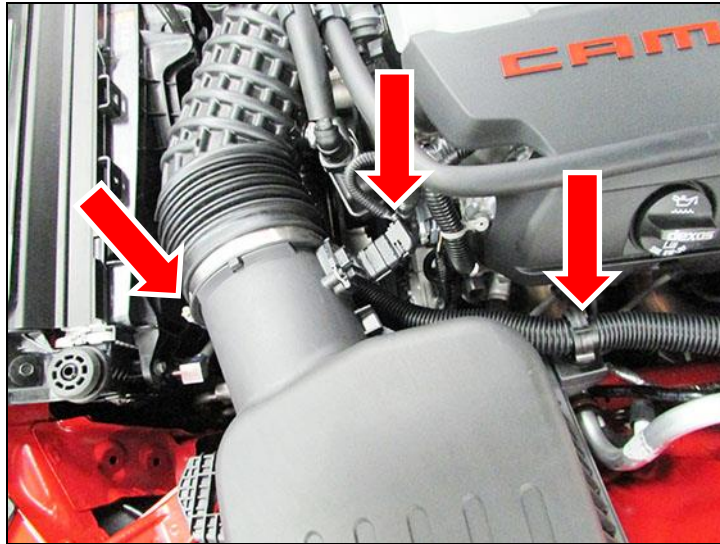


Figure 6

15. Remove the (x2) 10mm head nuts securing the A/C line to the chassis. Unplug hose on **Figure 8**.

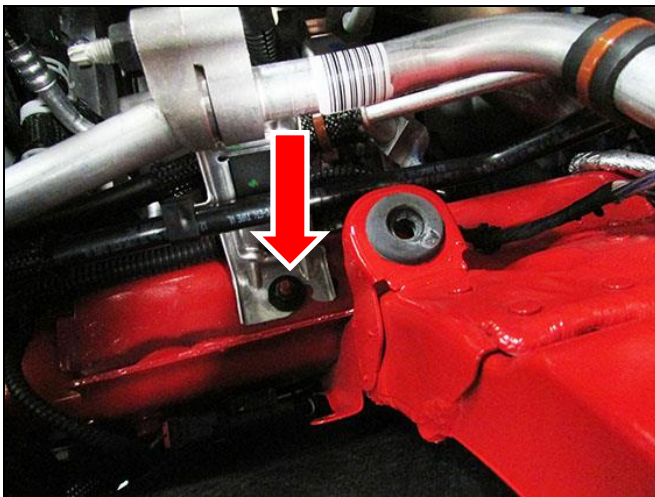


Figure 7

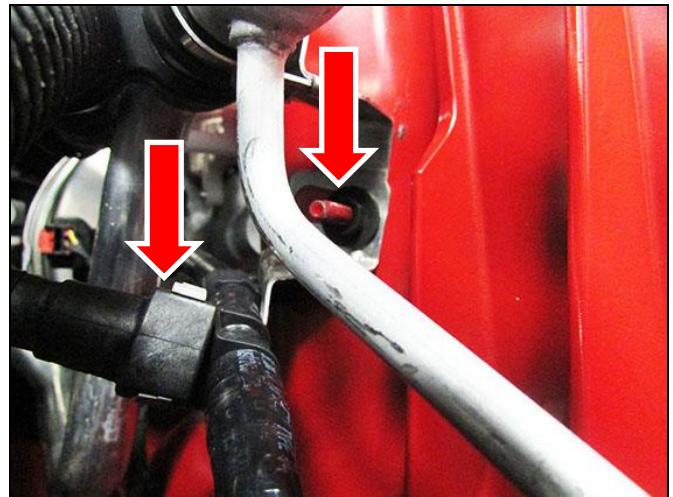


Figure 8

16. Remove (x10) 10mm head bolts securing the left and right side exhaust manifold heat shields and carefully remove the heat shields.
17. Remove the engine oil dipstick by removing (x1) T-30 Torx head bolt.
18. Remove (x8) spark plug wires off the coil packs and spark plugs.
19. Remove the left and right side coil packs by removing (x16) 10mm head bolts.
20. Carefully remove (x10) 13mm head bolts securing the left and right side OE exhaust manifolds off the engine. Take care and use caution when pulling these out and up from the engine bay. Set the (x10) bolts and gasket aside as they will be re-used.
21. Extend the left and right side pre O2 sensors by cutting the zip ties at the wire harness connection.
22. Disconnect the left and right side post O2 sensors. These will not be re-used.
23. Remove (x3) 10mm head bolts securing the starter heat shield.
24. Starting with the right side, install the Blackheart long tube header primary through the engine bay using the original gasket (replace if necessary) and start the middle bolt removed from step 20. Do not tighten.

25. Install the engine oil dipstick using the original Torx bolt removed from step 17 and tighten.
26. Install the starter heat shield using the original hardware removed from step 23 and tighten.
27. Now, install the remaining 4 bolts removed from step 20 and tighten the Blackheart long tube header right side primary (x5) total 13mm head bolts starting with the middle and working your way out.
28. Install the radiator surge tank by using the original (x1) 10mm head nut removed from step 13, clip the positive battery cable back onto the radiator surge tank, and then re-install the (x2) coolant lines. Top off coolant if necessary.
29. Remove (x1) 11mm head bolt securing the steering shaft to the steering box. Slide the steering shaft off the steering box.
NOTE: Do not turn the steering wheel!!!
30. Install the left side Blackheart long tube header primary through the engine bay using the original gasket (replace if necessary) and (x5) bolts removed from step 20 and tighten the 13mm head bolts starting with the middle and working your way out.
NOTE: You will have to pull the A/C lines off the chassis studs and hold up and out of the way and move the steering shaft to get the Blackheart long tube header in position. Take care and use extreme caution.
31. Using the original bolt from step 29, install the steering shaft back onto the steering box. Ensure the steering shaft is fully engaged onto the steering box and tighten the 11mm head bolt.
32. Using the (x2) 10mm head nuts removed from step 15, secure the A/C line back onto the chassis and plug the hose back from **Figure 8**.
33. Install the left and right side coil packs removed from step 19 using the original hardware and tighten.
34. Install the recommended 45 degree plug wires onto the coil packs and spark plugs. THESE WIRES ARE NOT INCLUDED AND SOLD SEPARATELY.
NOTE: Right Side – The #1 plug from the front of the car is required. The rest can either use the OE plug wires or the recommended plug wires.
35. Install the factory intake air box removed from step 14 by securing back onto the rubber grommets, tightening the hose clamp, clipping the wire harness back onto the air box, and plug the mass air flow sensor back on.
36. From under the vehicle, slide the left and right side Blackheart collector assembly over the left and right side primary tubes. Using the (x4) supplied nuts/bolts/spacers, secure the Blackheart collector assemblies to the primary tubes using the header tabs and tighten.
37. Install the left and right side pre O2 sensors onto the left and right side Blackheart collector assemblies and tighten. Secure the wire harness using the (x4) supplied cable ties and ensure the wires are free and clear of all moving and hot parts.
38. Blackheart long tube headers work with Blackheart RACE ONLY complete exhaust systems P/Ns **70501389-RHKR** or **70501390-RHKR**. Refer to the Blackheart complete exhaust system installation instruction sheet.
39. Install the (x4) engine covers back on the motor using the original hardware removed from step 12 and install the breather hose back onto the left side valve cover.
40. Connect the battery, start the engine, and check for leaks.
41. Re-check your work.
42. Remove the jack stands and lower the vehicle.
43. After 150 miles, re-check and tighten all bolts and clamps.

NOTE: It is normal for the Blackheart headers to emit smoke for the first few minutes during break-in period.

LIMITATION OF LIABILITY – DISCLAIMER:

The regulation of emissions production, noise levels, and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns, and counties.

HOOKER™ makes no warranties of merchantability, of fitness for particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations, or ordinances in the state where they may be sold to the ultimate purchaser, the consumer.

Unless expressly stated to the contrary in the catalog, instruction sheet; or price list, the entire risk as to the conformity of any company product in any such state and as to repair should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer, of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, the retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, or repair.

THE FOREGOING STATEMENT LIMITS THE LIABILITY OF THE MANUFACTURER.

California vehicle code, sections 27156 and 38391, prohibits the advertising, offering for sale, or installation of any device, which modifies a vehicle's emission control system, unless exempted, unless otherwise noted. HOOKER™ Headers that have not received an Executive Order (E.O.) exemption from these code sections are not legal for sale or use in California on vehicles originally equipped with catalytic converters, except for racing vehicles, which may never be driven upon a highway. Check with your local authorities to determine if these headers are legal for use in your particular area.

Technical Support: 1-866-464-6553

© 2016 Hooker Headers, Inc. All rights reserved. Tous Droits Réservés.

199R11003

Revision Date: 8-14-18