



**2016-2018 Chevrolet Camaro SS A8
Blackheart RACE ONLY Mid Pipe w/ X-Pipe (Compatible w/ Blackheart Long Tube Headers)
70501398-RHKR
Installation Instructions**



Thank you for making HOOKER HEADERS your choice in a high-performance exhaust system. Extensive dyno/track testing has enabled HOOKER to offer the most advanced design in exhaust systems. The installation, while not complex, will take a certain amount of time. However, the additional horsepower and improved performance will more than justify your efforts. Proper installation and maintenance will ensure long life and maximum performance from your HOOKER HEADER exhaust system.

BEFORE STARTING:

Your vehicle must be raised a minimum of 36 inches. A floor hoist is ideal. If no hoist is available, we strongly urge the use of axle stands as a safety measure. Please read these instructions in their entirety before attempting installation.

CAUTION! WORK ONLY ON A LEVEL SURFACE. USE JACKS /JACK STANDS OF SUFFICIENT CAPACITY TO LIFT AND SUPPORT YOUR VEHICLE. NEVER WORK UNDER A VEHICLE SUPPORTED BY A FLOOR OR BUMPER JACK.

INCLUDED HARDWARE:

P/N	Qty.	Description
556R27	2	Exhaust Coupler, 3 IN, 409SS Torca 96-0131
556R23	4	Band Clamp, 3.0" x 1.25" Wide, SS Torca
217R4	1	Cable Tie, Flame-Retardant 11.5" Long
599R94	2	Decal - Blackheart 4" x 2"

Check the hardware package. If anything is missing, please contact Technical Service at 1-866-464-6553 or 270-781-9741.

INSTALLATION:

1. Disconnect the negative cable from the vehicle battery.
2. Lift the vehicle and secure on jack stands.
3. From under the vehicle, remove (x5) 13mm head bolts securing the center cross brace to the chassis. Set these parts aside as they will be re-used.

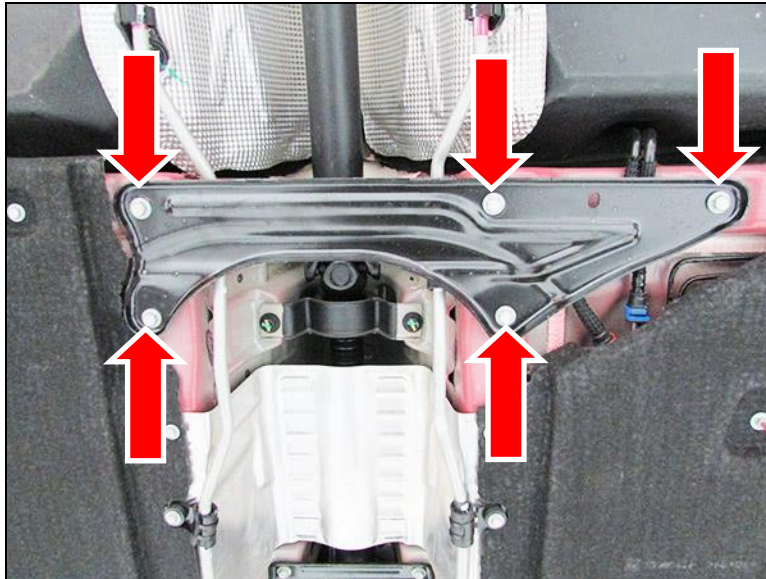


Figure 1

4. Remove (x6) 8mm head bolts securing the left and right side AFM valve actuators off the OE exhaust and remove the right side post O2 sensor.
5. Remove (x4) 15mm head nuts securing the left and right side rearmost aluminum hanger brackets off the vehicle.
6. Loosen the (x2) 2.75" band clamps securing the Blackheart adapter pipes to the OE mid pipe and then (x2) 3.0" band clamps securing the Blackheart Axle-Back Exhaust to the adapter pipe. Slide the Blackheart Axle-Back exhaust off the (x2) rubber isolation mounts, remove the aluminum hanger brackets off the vehicle, and remove the exhaust. Remove the adapter pipe off the Blackheart Axle-Back Exhaust. **NOTE:** The 2.75" band clamps and adapter pipes will not be re-used.
7. Loosen the left side band clamp securing the OE mid pipe to the left side post catalytic converter.
8. Remove (x2) 15mm head nuts securing the OE mid pipe to the right side post catalytic converter. Set these nuts and gasket aside as they will be re-used. Slide the (x2) rubber isolation mounts off the vehicle and remove the OE mid pipe. Transfer the (x2) rubber isolation mounts onto the Blackheart mid pipes.
9. Remove the left and right side main catalytic converters and OE exhaust manifolds and install the Blackheart long tube headers (**P/N 70101325-RHKR or 70101326-RHKR**). Refer to the Blackheart Long Tube Header (**NOT INCLUDED**) installation instruction sheet.
10. Using (x1) supplied 3.0" Torca clamp, install the Blackheart left side front pipe. Do not tighten the band clamp.
11. Using (x1) supplied 3.0" Torca clamp, install the Blackheart right side front pipe. Do not tighten the band clamp.
12. Using (x2) supplied 3.0" band clamps, install the Blackheart X-pipe onto the left and right side Blackheart front pipes. Do not tighten the clamps.
13. Using (x2) supplied 3.0" band clamps, install the Blackheart axle pipes onto the Blackheart X-pipe and secure the rubber isolation mounts on the vehicle. Do not tighten the band clamps.
14. Using the (x2) original 3.0" band clamps and rubber isolation mounts, secure the left and right side Blackheart tailpipe sections. Do not tighten the clamps.
15. Secure the aluminum brackets onto the vehicle using (x4) 15mm head nuts removed from step 5 and tighten.
16. Install the center cross brace removed from step 3 using the original (x5) bolts and tighten.
17. Using the original (x6) bolts removed from step 4, install the left and right side AFM valve actuators onto the valve brackets and tighten. **NOTE:** You may have to rotate the exhaust valve to match the AFM valve actuators.
18. Align the Blackheart Exhaust System and tighten the (x8) band clamps from steps 10, 11, 12, 13 and 14. Ensure that the complete system is free and clear of the vehicle.

19. Using the supplied cable tie, support the left side differential line away from the exhaust tube.

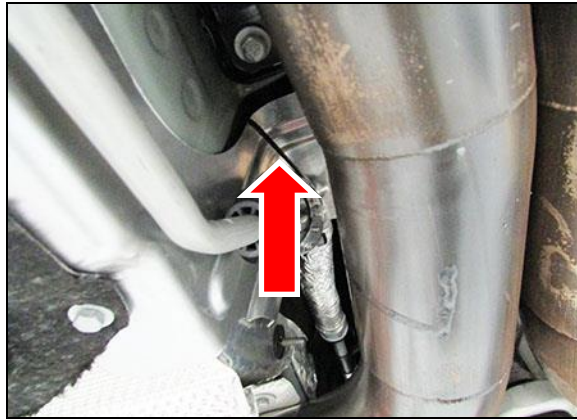


Figure 3

20. Connect the battery, start the engine, and check for leaks.

21. Re-check your work.

22. Remove the jack stands and lower the vehicle.

23. After 150 miles, re-check and tighten all bolts and clamps.

NOTE: It is normal for the Blackheart Exhaust System to emit smoke for the first few minutes during break-in period.

LIMITATION OF LIABILITY – DISCLAIMER:

The regulation of emissions production, noise levels, and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns, and counties.

HOKKER™ makes no warranties of merchantability, of fitness for particular purpose, or that its products are approved for general use, or that its products comply with laws, regulations, or ordinances in the state where they may be sold to the ultimate purchaser, the consumer.

Unless expressly stated to the contrary in the catalog, instruction sheet; or price list, the entire risk as to the conformity of any company product in any such state and as to repair should the product prove to be defective or non-conforming, is on the retail purchaser, the buyer, the ultimate consumer, of such product and it is not upon the seller, distributor, or manufacturer.

In this connection, the retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, or repair.

THE FOREGOING STATEMENT LIMITS THE LIABILITY OF THE MANUFACTURER.

California vehicle code, sections 27156 and 38391, prohibits the advertising, offering for sale, or installation of any device, which modifies a vehicle's emission control system, unless exempted, unless otherwise noted. HOKKER™ Headers that have not received an Executive Order (E.O.) exemption from these code sections are not legal for sale or use in California on vehicles originally equipped with catalytic converters, except for racing vehicles, which may never be driven upon a highway. Check with your local authorities to determine if these headers are legal for use in your particular area.

© 2016 Hooker Headers, Inc. All rights reserved. Tous Droits Réservés.

199R11043

Revision Date: 8-10-18