

REKUDO

Rekudo JL8 Rear Brake Caliper Bracket Installation Instructions RK400-09

Included Hardware:

Description	Qty.
JL8 Caliper Adapter, RHS	2
3/8-24 x 1.75 Bolt	8
3/8-24 Nylock Nut	8
3/8 Washer	24

INSTALLATION:

1. Before beginning, note that two identical caliper brackets are intentionally included in order to clear a staggered shock setup.
 2. These brackets are designed to work with C3 Corvette style brakes.
- Brake caliper brackets are designed to work with stock length axles.
 - 0.050" thick shims have been included to accommodate for aftermarket axles, or variations in axle housing length.
3. Install caliper bracket onto axle with dust shield as shown (**Figure 1**).

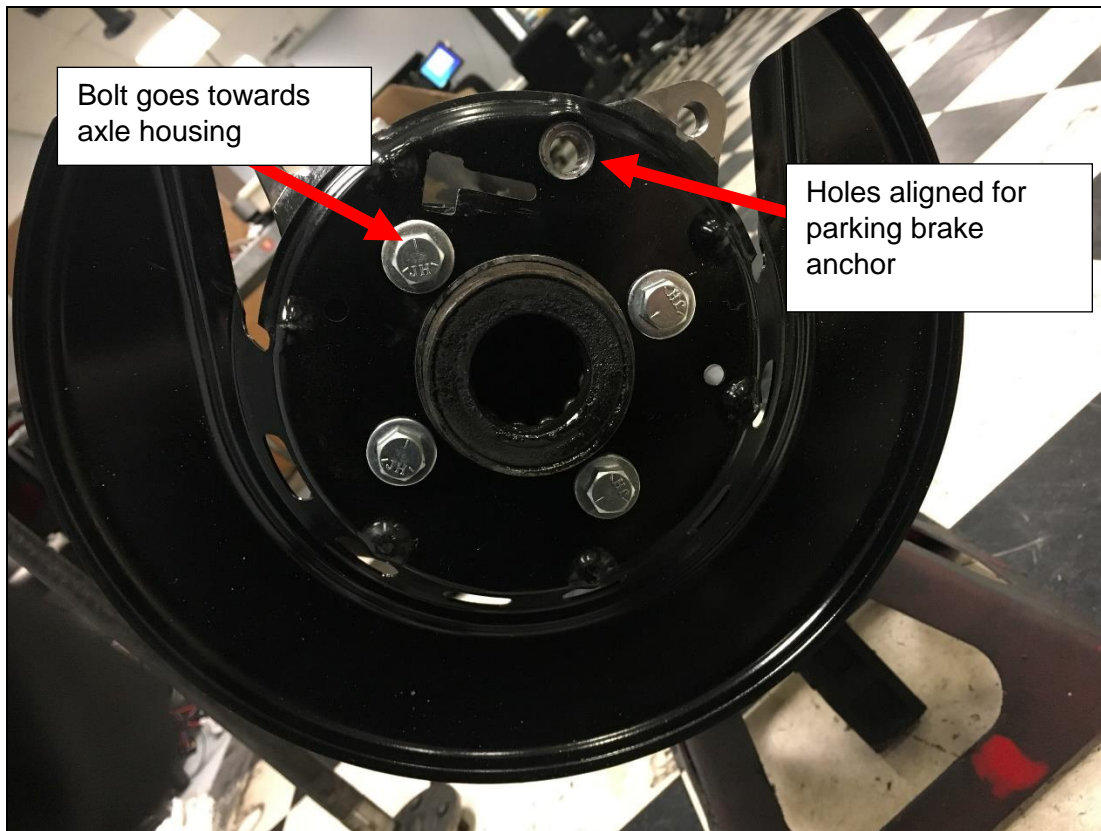


Figure 1

4. Torque (4) 3/8ths nuts to 37ft/lbs.

© 2019 REKUDO, Inc. All rights reserved. Tous Droits Réservés.

199R11982

Date: 12-5-19