## **73-87 One Piece Window Conversion**

## **Power Door Lock Supplement**

If your truck came equipped with Power Door Locks, you will need to complete the following steps BEFORE installing your new One-Piece Glass. This mod can be performed any time PRIOR to installing your new glass.








Remove the solenoid by removing the two bolts on the door, and pushing the top of the Door Lock Rod inside the door.



Attach the popper rod extension using the hardware supplied with your power door lock supplement.



Mark a new pair of holes exactly 9.5" below the original holes and drill them out with a 5/16" drill bit.

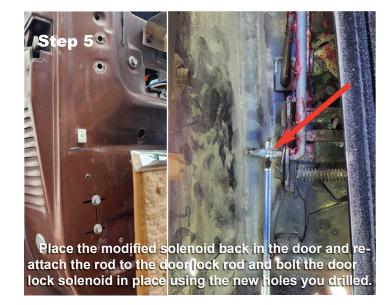

© 2022 BROTHERS All rights reserved. This manual or any portion thereof may not be reproduced or used in any manner without the express written permission of BROTHERS