

1986-93 Mustang 5.0L Warlock™ Catback Systems

42604FLT - Mustang LX w/ standard Warlock™ mufflers 42605FLT - Mustang GT w/ standard Warlock™ mufflers



1986-95 Mustang 5.0L Stinger™ Catback Systems

42600FLT - Mustang LX/GT w/ standard Warlock™ mufflers 42601FLT - Mustang LX/GT w/ Warlock™ By-Pass mufflers

WARNING! Breaking in an engine with ceramic-coated headers WILL result in damage to the coating and will VOID all warranties. Ceramic-coated headers require several heat cycles to fully cure before they will withstand extreme heat. FLOWTECH® & Hooker® recommend using cast iron exhaust manifolds or old headers to break in new engines to avoid coating damage. Please call tech service at 270-781-9741 for additional information regarding ceramic-coated exhaust products.

READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING:

For the ease of installation, your vehicle must be raised a minimum of 36". Warning: Should you decide to install any exhaust product yourself, be warned that the original equipment jack that came with the vehicle is intended for emergency use only. The use of a frame lack, in conjunction with a floor lack, as the main support is highly recommended to minimize the accidental dropping of a vehicle while the installation proceeds. Never go under a vehicle that is supported by only a bumper jack!

A. INSTALLATION:

- 1. Remove the stock mufflers and tailpipes from the H-pipe secondary flanges back. Save the rubber insulator hangers and intermediate pipe hardware. They will be used later on your new system. NOTE: Stock tailpipes are welded to the stock mufflers. These must be cut off using a hacksaw or cutting torch.
- 2. Install the driver's side intermediate pipe/muffler unit. Secure to the H-pipe flange by using the stock bolts and nuts. Install the supplied threaded rod hanger through the welded bracket on the back of the Warlock™ muffler and through the stock rubber insulator. On the reverse side, level and adjust the height of the muffler by raising or lowering the 1/2" nuts on the rod. When level, lock the nuts and washers together using two 3/4" end wrenches. Install the 1/2" push nuts (supplied in kit) on the upper end of the rods to keep the rod hangers from sliding out of the rubber insulator.

3. Install the passenger's side intermediate pipe/muffler unit. Repeat all of the same steps as the driver's side, except when you finish adjusting the nuts on the rod, cut off the excess threads on the rod with a hacksaw.


B. WARLOCK™ CATBACK SYSTEM:

THIS SYSTEM WAS DESIGNED USING TWO PIECE TAILPIPES FOR EASIER **INSTALLATION AND FIT.** Install section "A" of the tailpipes into the muffler outlets. Install the 2 1/2" muffler clamps. Secure the clamps, but do not tighten yet. Install section "B" over the axle into section "A's" notched slip joints. Slide the rear tailpipe rod hangers through the stock rubber insulator hangers. Align the tailpipes for maximum clearance. Now tighten the muffler clamps and the 1/4"-20x2" hex bolts that go through the spacers on the notched slip joints on section "A".

C. WARLOCK™ STINGER KIT:

1. Cut the 2 1/2" O.D. turndowns to the desired length. Adjust the desired exit angle, then tighten in place using the 2 1/2" muffler clamps supplied in the kit.

When you have finished installing your catback exhaust system, take the vehicle for a road test. Listen carefully for any exhaust leaks or other strange noises and make corrections. When the vehicle has been driven for a few days, retighten the header bolts.

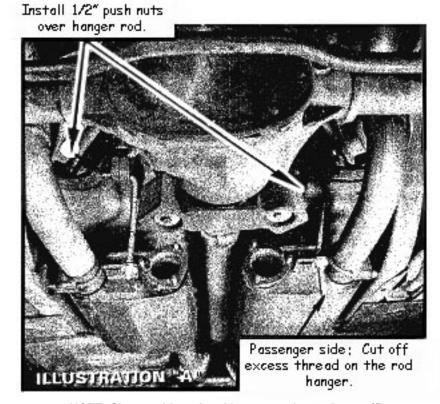

NOTE: Shown with optional bypass series racing muffler.

P/N 42600-3901FLT Revised 6-21-06

How did we do? Your questions and comments are always welcome at FLOWTECH® Our technical service department is open Monday through Friday, during the hours of 8:30 a.m. until 4:30 p.m. Central Time. We can be reached at:

1801 Russellville Road Bowling Green, KY 42102 PHONE: 270-781-9741 FAX: 270-781-9772

<u>IMPORTANT!</u> Unless certified or exempted by the California ARB, Headers are not legal for sale in California on 1975 or later model vehicles, except for racing vehicles, which are not legal for use or operation on any highway. Pre-Catalyst vehicles must utilize original air injection system, if so equipped. It is the responsibility of the customer to reinstall the air injection device to his vehicle.

<u>LIMITATION OF LIABILITY - DISCLAIMER:</u> THE REGULATION OF EMISSIONS PRODUCTION, NOISE LEVELS, AND SAFETY STANDARDS IS UNDERTAKEN BY THE FEDERAL GOVERNMENT, EACH OF THE FIFTY STATE LEGISLATURES AND BY MANY LOCAL MUNICIPALITIES, TOWNS, AND COUNTIES.

FLOWTECH® MAKES NO WARRANTIES OF MERCHANTABILITY, OF FITNESS FOR PARTICULAR PURPOSE, OR THAT ITS PRODUCTS ARE APPROVED FOR GENERAL USE, OR THAT ITS PRODUCTS COMPLY WITH LAWS, REGULATIONS, OR ORDINANCES IN THE STATES WHERE THEY MAY BE SOLD TO THE ULTIMATE PURCHASER, THE CONSUMER.

UNLESS EXPRESSLY STATED TO THE CONTRARY IN THE ACCOMPANYING CATALOG, INSTRUCTION SHEET, OR PRICE LIST, THE ENTIRE RISK AS TO THE CONFORMITY OF ANY COMPANY PRODUCT IN ANY SUCH STATE AND AS TO REPAIR SHOULD THE PRODUCT PROVE TO BE DEFECTIVE OR NONCONFORMING, IS ON THE RETAIL PURCHASER, THE BUYER, THE ULTIMATE CONSUMER, OF SUCH PRODUCT AND IT IS NOT UPON THE SELLER. DISTRIBUTOR. OR MANUFACTURER.

IN THE CONNECTION, RETAIL PURCHASER, THE BUYER, THE ULTIMATE CONSUMER ASSUMES THE BURDEN OF THE ENTIRE COST OF ANY AND ALL NECESSARY SERVICE, ALTERATIONS, OR REPAIR.

THE FOREGOING STATEMENT LIMITS THE LIABILITY OF THE MANUFACTURER.

CALIFORNIA VEHICLE CODE SECTIONS 27156 AND 38391 PROHIBIT THE ADVERTISING,
OFFEDING FOR SALE, OR INSTALLATION OF ANY DEVICE WHICH MODIFIES A

CALIFORNIA VEHICLE CODE SECTIONS 27130 AND 36391 FROMIBIT THE ADVERTISING, OFFERING FOR SALE, OR INSTALLATION OF ANY DEVICE WHICH MODIFIES A VEHICLE'S EMISSIONS CONTROL SYSTEM UNLESS EXEMPTED. UNLESS OTHERWISE NOTED, FLOWTECH® HEADERS HAVE NOT RECEIVED AN EXEMPTION FROM THESE CODE SECTIONS AND ARE NOT LEGAL FOR SALE OR USE IN CALIFORNIA ON VEHICLES ORIGINALLY EQUIPPED WITH CATALYTIC CONVERTERS. IT IS ILLEGAL, EXCEPT FOR RACING VEHICLES, WHICH MAY NEVER BE DRIVEN UPON A HIGHWAY, TO REMOVE OR OTHERWISE RENDER INOPERATIVE ANY EMISSION CONTROL DEVICE ON REGULATED MOTOR VEHICLES (CHECK CATALOG LISTINGS TO ENSURE PROPER APPLICATION). IN THE OTHER 49 STATES, UNLESS OTHERWISE NOTED, FLOWTECH® HEADERS ARE NOT LEGAL FOR POLLUTION-CONTROLLED MOTOR VEHICLES, EXCEPT FOR RACING VEHICLES, WHICH MAY NEVER BE USED UPON A HIGHWAY AND ARE NOT INTENDED OR APPLICABLE FOR HIGHWAY USE.