



Installation Instructions
717902
2015-22* FORD MUSTANG
2.3L ECOBOOST & 3.7L ENGINE

Coupe & Convertible

*3.7L V6 engine option is no longer available as of 2018

OVERVIEW:

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITM #	PART #	DESCRIPTION	QTY.
1	70001-536	Left Muffler Assembly	1
2	70001-537	Right Muffler Assembly	1
N/A	PK798	Hardware Package includes:	1
3	MC225BS	2¼" Stainless Band Clamp	2

REMOVE STOCK EXHAUST SYSTEM:


2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

WARNING:


Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease preparation and installation of your new kit:


- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

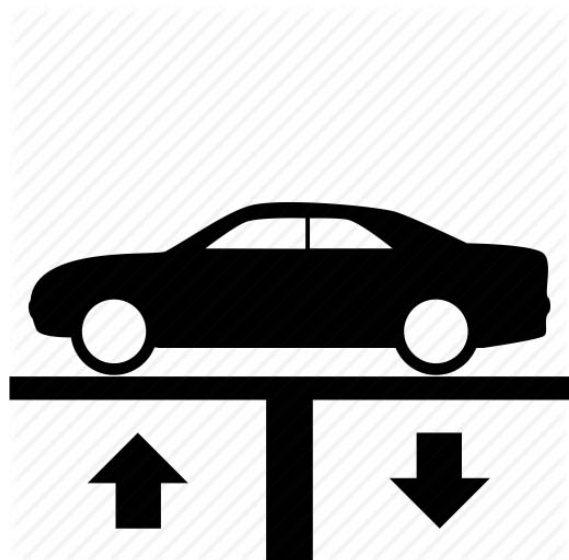

3. For convertible model vehicles, remove and retain bolts and body braces to access exhaust system.

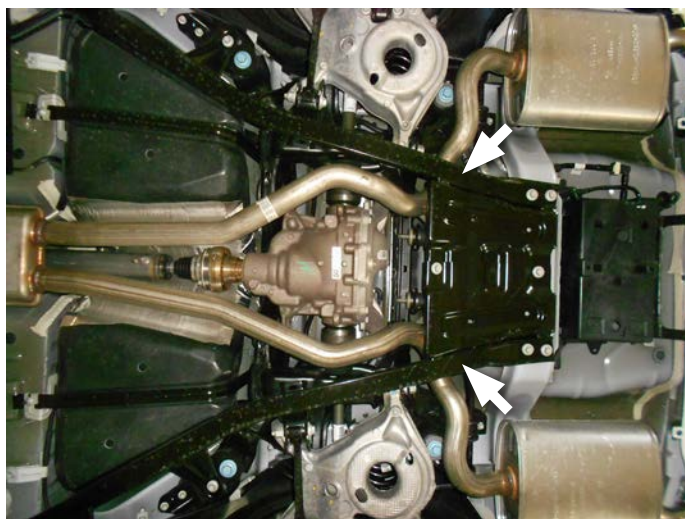

4. Measure and mark 2½" from beginning of straight section on exhaust pipes (x2) as shown. Support then cut pipes at marks. Unbolt hanger mounts and remove tailpipes from vehicle.

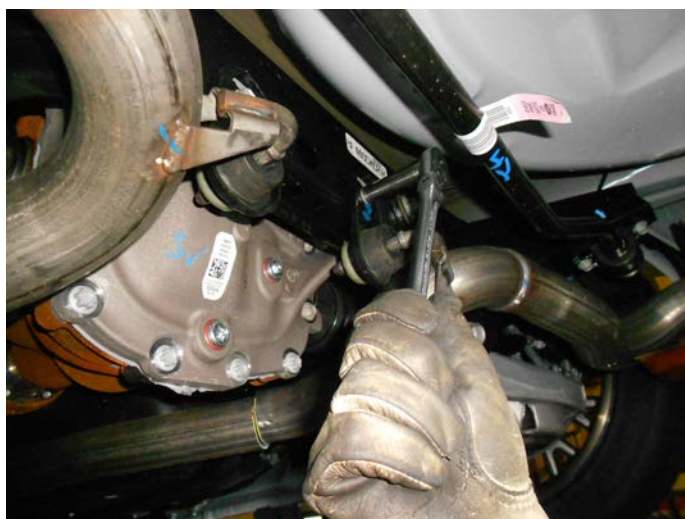


INSTALL FLOWMASTER EXHAUST SYSTEM

5. Transfer factory hanger mounts (x2 ea.) from each tailpipe over to corresponding FFX mufflers. Remove nuts from stock and Flowmaster clamps, apply anti-seize compound to bolts and re-install nuts.

NOTE: The image in this step is intended for illustrative purposes only and may or may not accurately reflect components included in your kit.



- Place (x2) **clamps (3)** onto **left (1)** and **right (2)** mufflers then connect them to factory pipes and re-bolt hanger mounts onto vehicle.

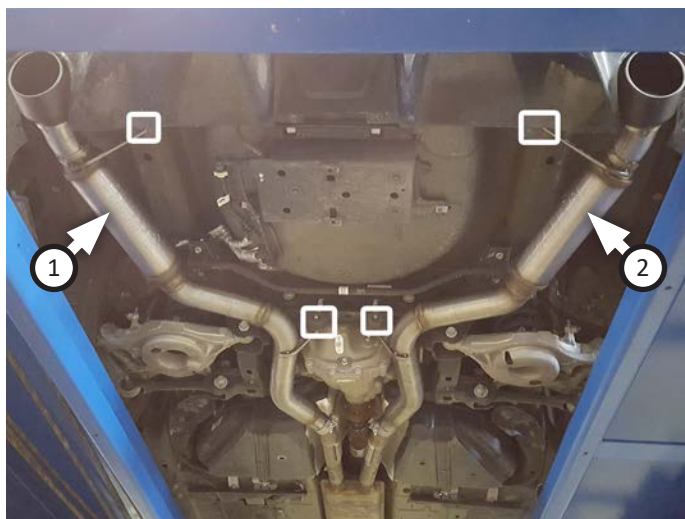

NOTE: Muffler tips should be centered in bumper cutouts.

- Adjust exhaust components for fit; maintaining ½" clearance and compensating for suspension, travel and vibration, then tighten all clamps.
- Recommended: Secure slip-fit connections with a 1-inch tack weld then spray high-temp paint over each weld to prevent rust and premature corrosion.



Congratulations, the installation of your FLOWMASTER performance exhaust system is now complete!





Installation Diagram
717902
2015-22* FORD MUSTANG
2.3L ECOBOOST & 3.7L ENGINE
Coupe & Convertible

*3.7L V6 engine option is no longer available as of 2018

