



## C8 Corvette Roof Spoiler Kit Installation

Part Number: CV-C8R190003-PASB


### Required Tools:

- 50% Isopropyl Alcohol

**CAUTION:** If any part of this installation seems beyond your level of installation experience, please seek the help of a certified professional.

### Installation Procedure:

1. Clean the installation area with soap and water, and then 50% isopropyl alcohol.
2. Before removing the tape release film, place one of the Roof Spoilers onto the rear hatch as shown in the image below to get a feel for the proper alignment.

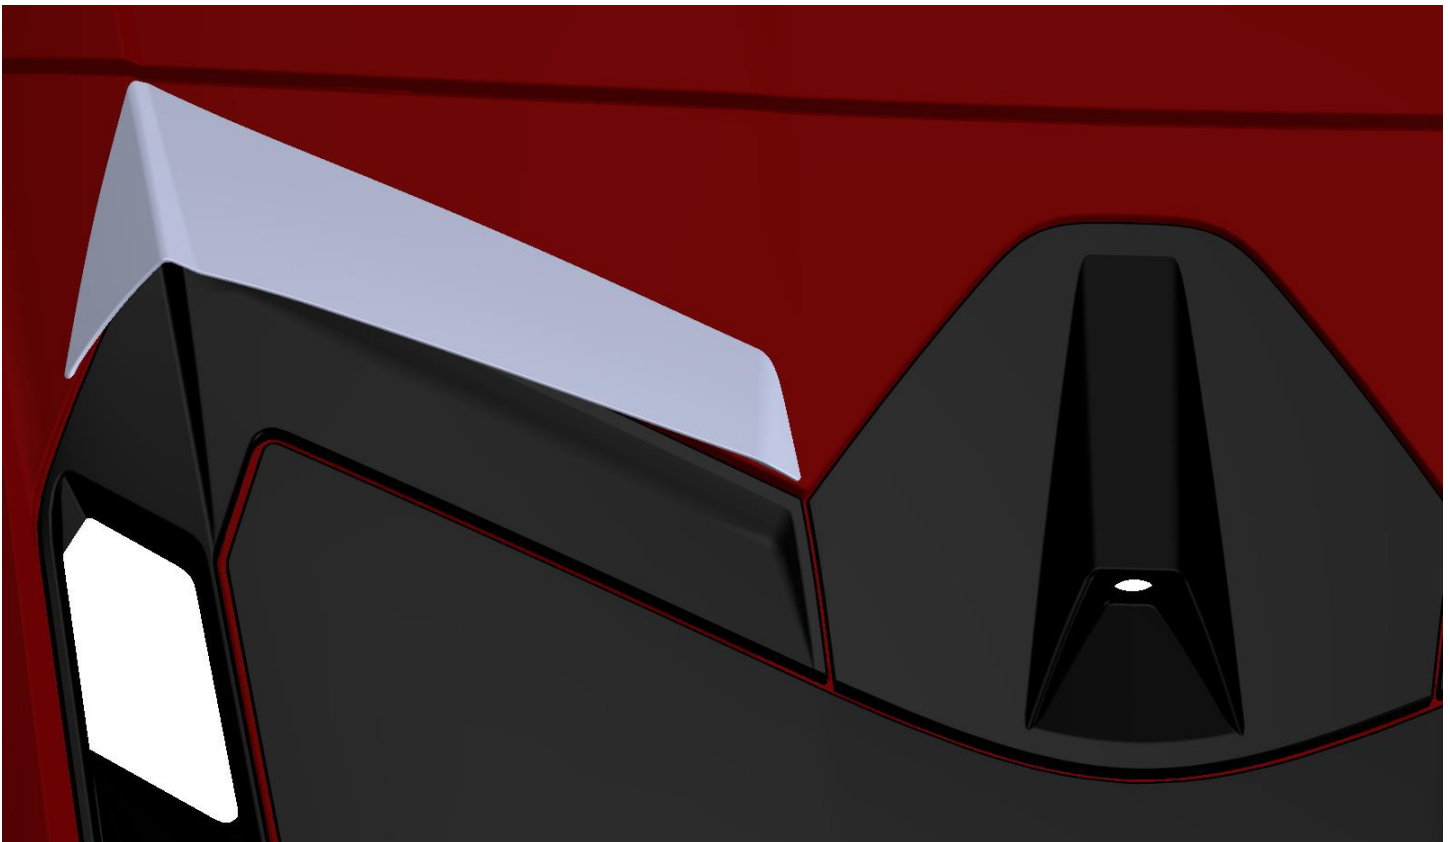

3. Lift up the Roof Spoiler and remove the red tape release film from the underside of the part.
4. Carefully align the part back onto the rear hatch. **Once the tape makes solid contact with the vehicle, do not attempt to peel the Roof Spoiler back up to realign it as the tape could be damaged.**

5. Once the Roof Spoiler is seated onto the rear hatch, press it firmly into the surface of the vehicle. Move your hand along the surface of the part, holding pressure at each location for a few seconds. This will ensure the tape forms a strong bond.
6. Perform this same procedure with the other Roof Spoiler.
7. If you wish to remove the parts at a later time, use a hair dryer (not a heat gun) at the edge of the part to heat the tape. Slowly and firmly peel up the Roof Spoilers one area at a time. It should take approximately 20 minutes to remove without damaging the parts.

**Completed Result:**



**Holley® Performance Products, Inc.**  
**1801 Russellville Road**  
**Bowling Green, KY 42101**

Technical Support: 1-866-464-6553  
Phone: 1-270-781-9741  
[www.holley.com](http://www.holley.com)