



# MUSTANG

## INSTALLATION INSTRUCTIONS

### Mustang Billet Shock Tower Caps

Part Number: C7ZZ-18A017-BL (1964-66) C7ZZ-18A017-BL (1967-70)

Thank you for purchasing a quality Scott Drake product. Please refer to the installation instructions below when installing this product.



C5ZZ-18A017-BL (1964-66)



C7ZZ-18A017-BL (1967-70)

#### TOOLS REQUIRED:

- 3/8" Drive Ratchet
- 3/8" Drive Torque Wrench
- 1/2" Socket
- 1/4" Allen Socket

#### INSTALLATION:

- Step 1: Remove the 2 bolts securing the shock absorber to the shock tower cap using a 1/2" socket.
- Step 2: Remove the 3 bolts securing the shock tower cap to the body using a 1/2" socket.
- Step 3: Rotate the shock tower cap and remove it.
- Step 4: Install the Scott Drake billet shock tower cap onto the body.
- Step 5: Install the 3 shock tower bolts and torque to 18-30 ft-lbs.
- Step 6: Compress the shock absorbers piston into the cylinder, and then thread the Allen bolts into the shock tower cap.
- Step 7: Torque the Allen bolts to 10-15 ft-lbs using a 1/4" Allen socket.
- Step 8: Repeat step 1-7 on the other side of vehicle.

#### SATISFACTION GUARANTEE:

If you are not happy with this product, for any reason, or found product to be defective in manufacturing, simply return it to Scott Drake within 30 days of purchase and we will replace it - no questions asked. We stand behind our products one hundred percent, so you can sit behind the wheel with pride.


*\*Proof of purchase and dated receipt must be present with any return. All returned products are tested and if found to be damaged by the installer, no replacement will be issued. You pay the cost to ship to us, we pay for the return shipping. Guarantee does not include any labor and/or tax charges incurred.*



Step 1




Step 2

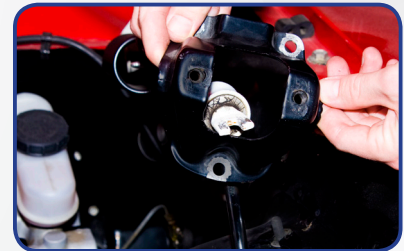

Step 3



Step 5

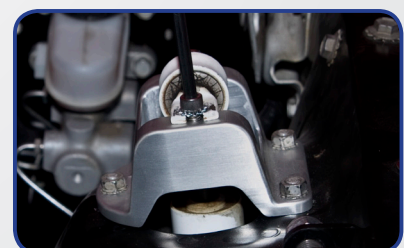

Step 7