

JAMMER CAI

INSTALL GUIDE

2012-2014 Ford F-150
3.5L EcoBoost



TABLE OF CONTENTS

3	GETTING STARTED
3	PARTS LIST
4	INSTALLATION INSTRUCTIONS
4	REMOVING THE STOCK INTAKE ASSEMBLY
6	INSTALLING THE AIR FILTER
7	INSTALLING THE HOUSING
9	INSTALLING THE INTAKE TUBE
10	WARRANTY

GETTING STARTED

PARTS LIST

Item	Description	Qty
1	CLAMP #052 (2-13/16"-3-3/4").....	1
2	COUPLING REDUCER (3-1/4"x 3").....	1
3	CLAMP #056 (3-1/16"-4").....	1
4	INTAKE TUBE.....	3
5	COUPLING, ELBOW SILICONE.....	1
6	CLAMP #072 (3"-5").....	1
7	HEAT SHIELD.....	1
8	TRIM SEAL (24.5").....	1
9	AIR FILTER.....	1
10	ADAPTOR.....	1
11	BUTTON HEAD SCREW.....	5
12	HEX SCREW.....	1
13	CLAMP # 064 (2-1/2"-4-1/2").....	1
14	COUPLING REDUCER (3.90" x 3-1/2").....	1



INSTALLATION INSTRUCTIONS

REMOVING THE STOCK INTAKE ASSEMBLY

CAUTION: Disconnect the ground cable from the battery before installation.

STEP 1 - Disconnect the Mass Air Flow (MAF) sensor plug from stock air box.




STEP 2 - Loosen the driver and passenger intake clamps.



STEP 3 - Unclip the 3 housing clips that secure the top portion of the stock intake housing.

STEP 4 - Remove the stock intake tube by prying the passenger and driver side intakes first then remove the top portion of the housing.

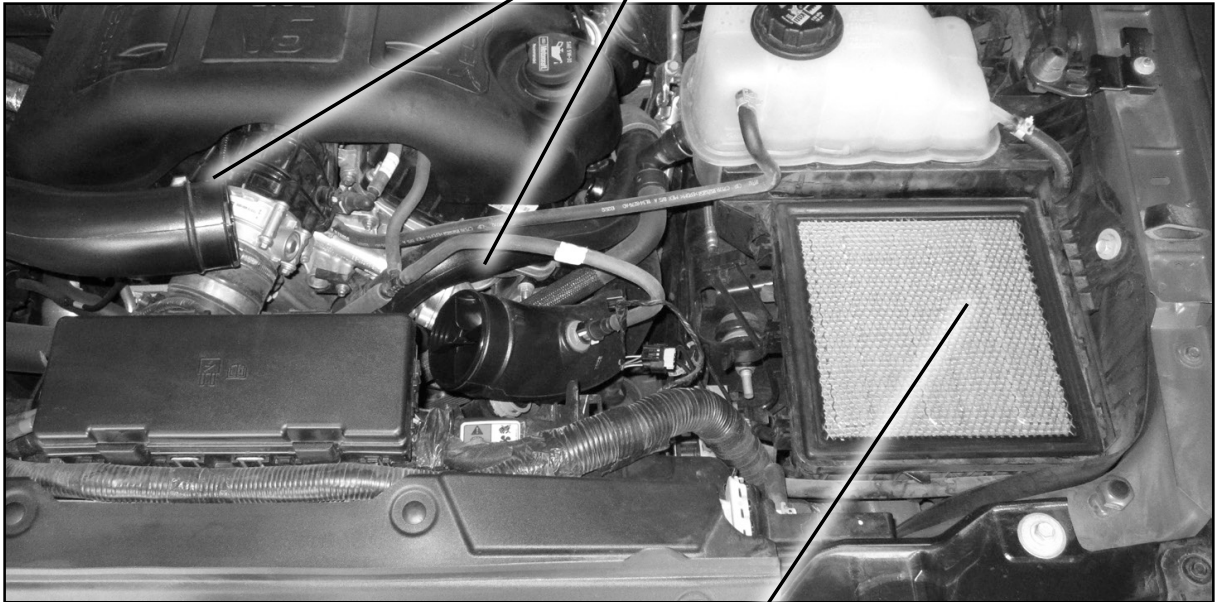

STEP 5 - Remove the stock filter from lower portion of the housing.

INSTALLING THE AIR FILTER

STEP 6 - Install the adaptor onto the Jammer housing using the five (5) button head screws provided with a 5/32 hex key.




STEP 7 - Install the elbow coupling onto the adaptor using provided clamps.
(Do not tighten).

STEP 8 - Install the seal trim around the edges of the housing.

STEP 9 - Install the filter.

INSTALLING THE HOUSING


STEP 10 - Install the Jammer housing on top of the lower portion of the stock housing. Clamp down using factory clips.

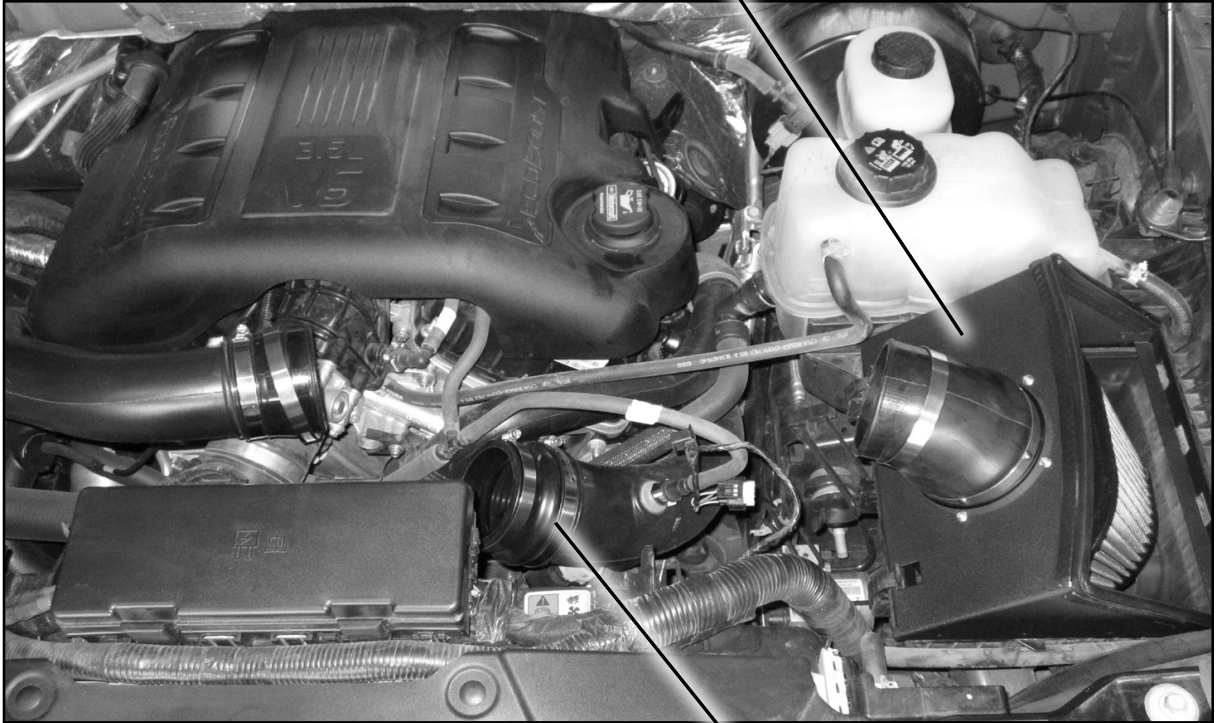

STEP 11 - Install the larger reduction coupling on the driver side runner. Clamp down but do not tighten.

STEP 12 - Install the smaller reduction coupling on the passenger side runner. Clamp down but do not tighten.

STEP 13 - Remove the MAP sensor from the stock air box using 5/32" 6-point socket.

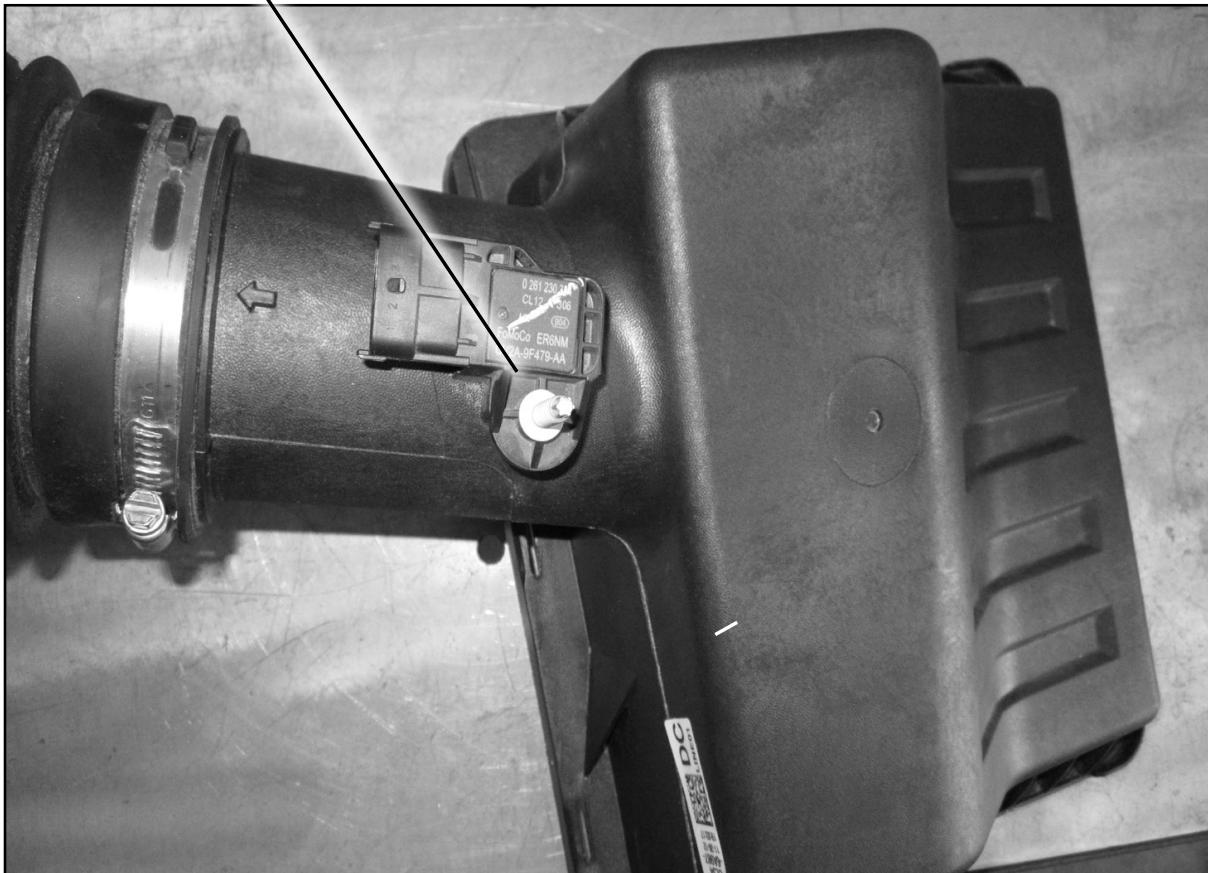


STEP 14 - Install the map sensor onto the Jammer intake tube using the hex head screw provided with a 10mm socket.



INSTALLING THE INTAKE TUBE

STEP 15 - Install the Jammer intake tube passenger side runner first and then the driver side runner, followed by inserting the tube onto the adaptor coupling elbow.

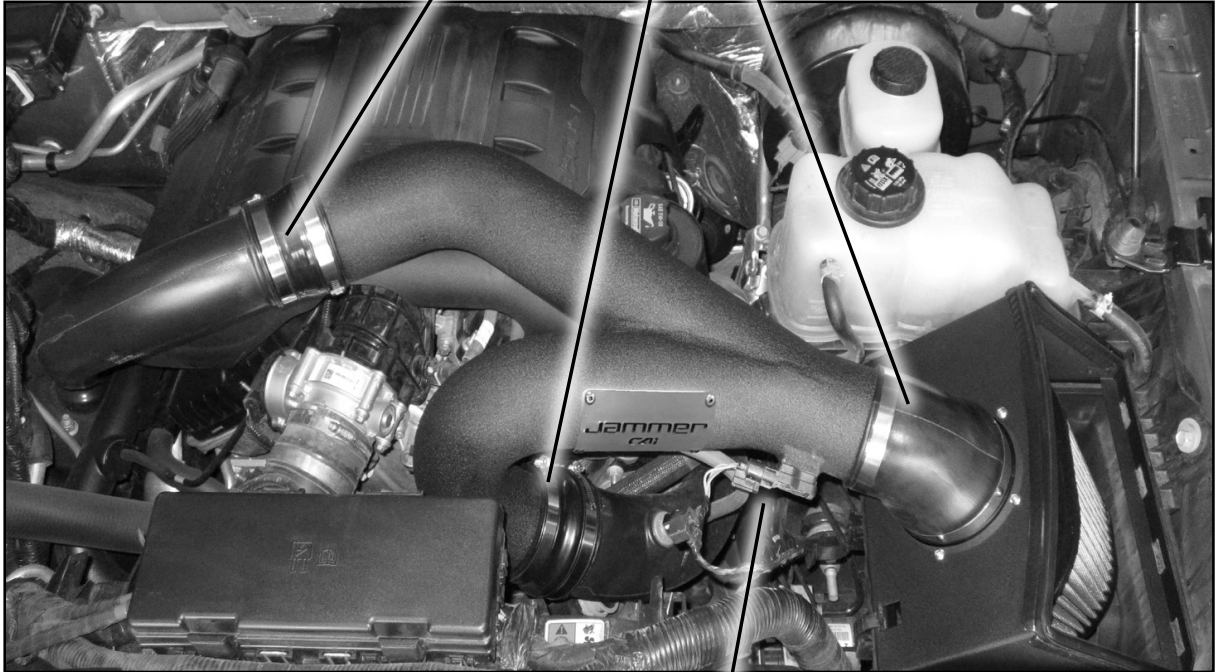

STEP 16 - Adjust the couplings and the tube for proper alignment and then tighten all clamps.

STEP 17 - Reconnect the MAF sensor plug.

STEP 18 - The installation is now complete!

NOTE: Verify all connections are secure 100-200 miles after installation.

WARRANTY

Powerteq, LLC, (hereafter “SELLER”), subject to the conditions and limitations set forth herein, warrants to the original consumer purchaser only that each Jammer product sold by SELLER (the “Product”) through an authorized dealer will be free from defects in material and workmanship under normal operating conditions for one (1) year after the date of purchase. SELLER will repair or replace, at SELLER’s option, any Product that is found to be defective in material or workmanship under normal operating conditions during the one-year period after the date of purchase by the original consumer purchaser.

What Is Not Covered by This Warranty?

This warranty does not apply to any of the following:

1. Loss, damage, repairs, or maintenance required as a result of accident, abuse, negligence, or misuse.
2. Loss, damage, repairs, or maintenance required as a result of any third-party tuning software.
3. Loss, damage, repairs, or maintenance required as a result of fire, water, hail, theft, earthquake, wind, ice, lightening, acts of god, accident, animals, corrosive atmosphere, or other external causes beyond the control of SELLER.
4. Any special, indirect, incidental, consequential, or punitive damages, including property damage, arising out of or related to the use or loss of use of the Product under this Limited Warranty.
5. Any Products purchased through auction websites.

Limitation of Liability

The terms of this Limited Warranty constitute the entire agreement between the parties with respect to the Product. The original consumer purchaser’s exclusive remedy shall be limited to the repair or replacement of the defective product. EXCLUDING THE LIMITED WARRANTY PROVIDED ABOVE, SELLER, TO THE MAXIMUM EXTENT PERMITTED BY LAW, MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, AND DISCLAIMS ALL WARRANTIES, DUEITES AND CONDITIONS, WHETHER EXPRESS, IMPLIED, OR STATUTORY, WITH RESPECT TO THE WORK, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY REMEDY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT.

How to Make a Warranty Claim

Contact Powerteq Customer Service. BUYER will be required to submit proof of purchase from an authorized dealer within 5 days of the warranty claim.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS. IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT, THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

COPYRIGHT© 2017 REV 00

For additional questions not found in the user guide call:

Powerteq Technical Support: (855) 292-2121 6:00 am - 5:00 pm MST

**To expedite your support call, please have your Vehicle Information,
Part Number, and Serial Number ready prior to calling Technical Support.**